

**INSTALLATION GUIDE**  
GVM(3613INT)  
SELF SUPPORTING  
GUN RACK FOR  
2013+ FORD INTERCEPTOR


**Pro-gard**<sup>™</sup>  
PRODUCTS LLC.

STRONG | RELIABLE | SECURE

**pro-gard.com**  
**800.480.6680**

THESE COMPONENTS ARE REQUIRED  
TO INSTALL THE PRO-GARD GVM SERIES WEAPONS SYSTEM

G7009A (weapon specific)  
GUN RACK  
&  
4GVM3613 GUN RACK  
MOUNT BASE

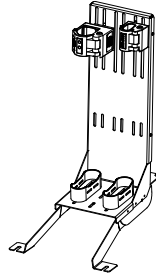


- I. Refer to the diagram on the last page of these instructions to verify all parts were received.
- II. The following tools will be required to complete the installation.

Socket Wrench with 15mm, 3/8" & 7/16" sockets.  
Phillips screw driver.

- II. Installing the gun rack.
  - A. Loosen both inner rear seat bolts of both the driver and passenger seat, so that seats can be lifted about 1/2". Remove the lower portion of the rear seat cushion by releasing the two plastic locking clips at the front of the rear seat. Then force the seat towards the rear of the vehicle while pushing down to get the metal hooks to release from the vehicle. Then remove the lower seat cushion from the vehicle. Install front mounting legs to the base using supplied fasteners. Then install the mounting base into the vehicle. If the vehicle is equipped with the wire raceway option above the driveshaft tunnel, remove it from the vehicle. The gunrack allows space for the wires to run underneath the gunrack base without the need for the raceway. Secure the gunrack base to the rear seat frame (See Fig. 1) through the four holes(if there was a factory raceway, the existing holes and fasteners may be used). Use the supplied self drilling screws to secure the rear of the gunrack base to the rear seat support frame.

FIG. 1

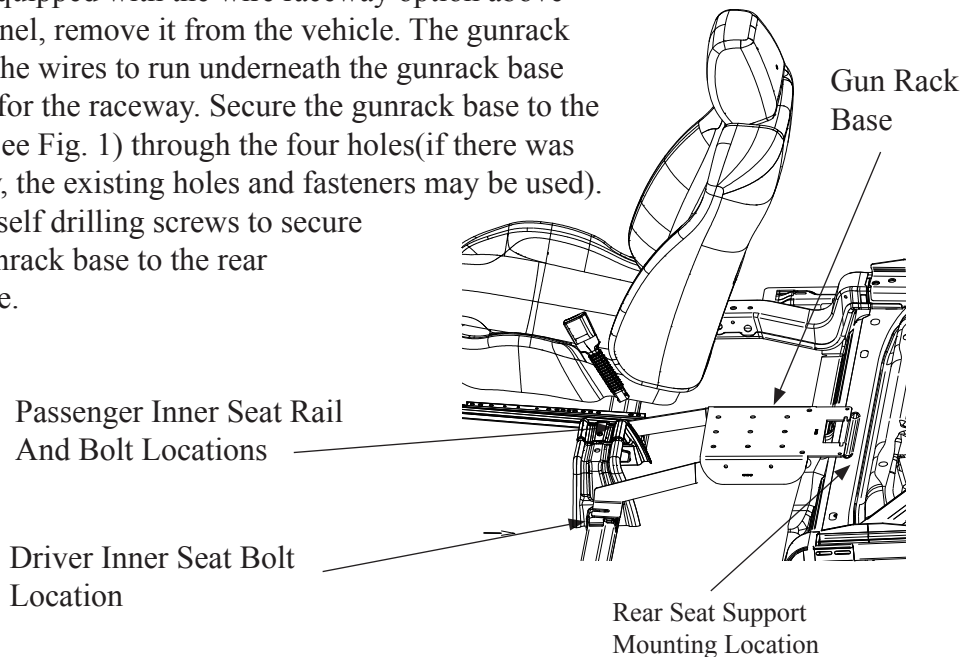

B. Rest the gun rack, 3G7009A on the previously installed base. Install two 3X184 bolts into the butt plate slots and through the mounting base. (Leave these bolts loose for now to allow movement of the gun rack on the base).

IV. Weapon fitment.

A. Remove the 4 philips head screws that secure black plastic ABS back to the gun rack. Remove the back from the gun rack for the rest of the gun lock adjustment process.


B. Place weapon in the gun rack and adjust lock and butt plate bracket to properly fit weapon. Charging brackets and trigger guards should also be adjusted to ensure the weapon cannot be discharged.

V. Final installation.

A. Wire electric gun locks per timer instructions. See page 5

B. Re-install the back onto the gunrack with the 6 screws that were removed earlier.

C. Install one foam pad into each butt plate bracket.

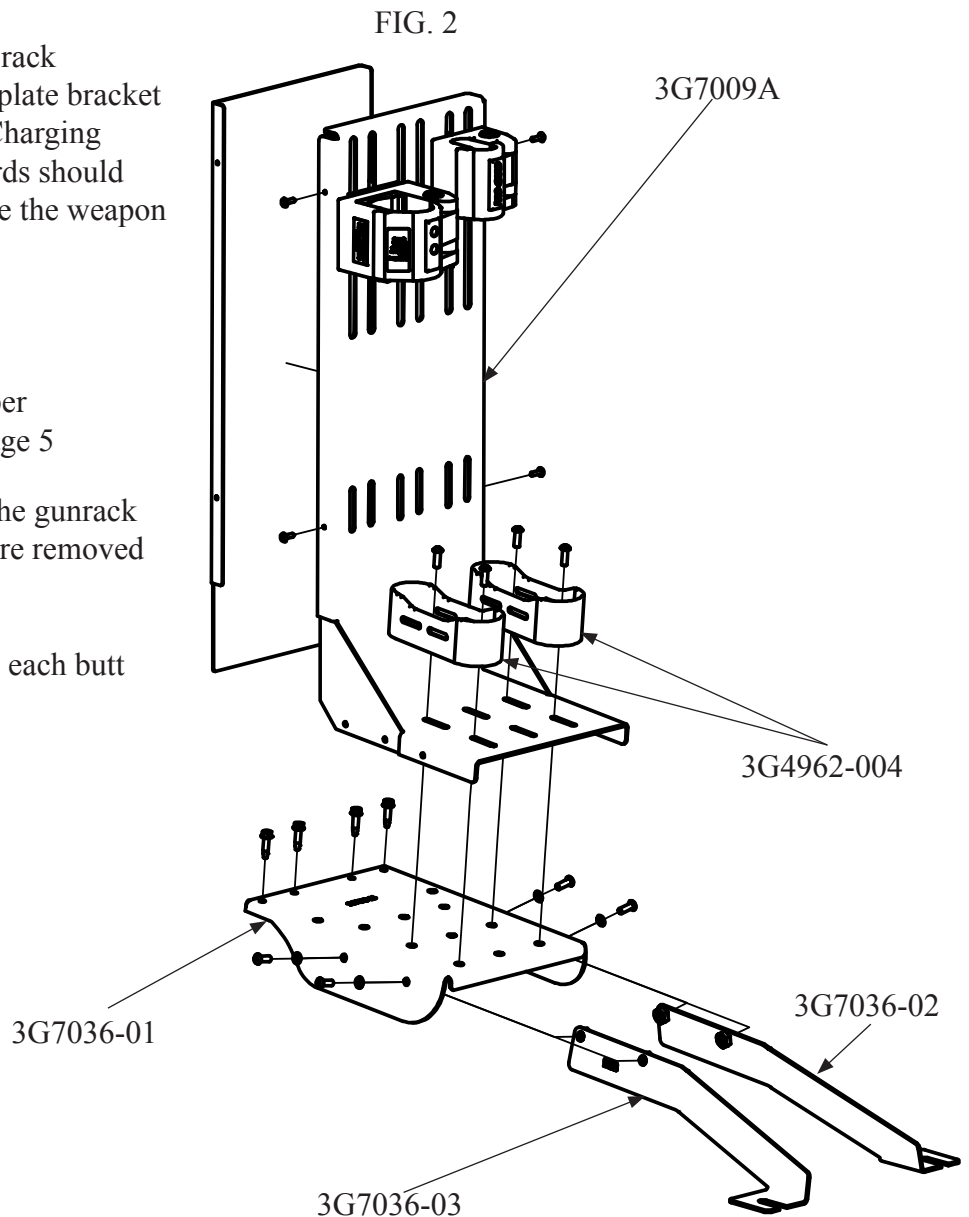

## VI. Lock Head Operating Instructions

To release the weapon:

- A. Grasp the weapon, but do not pull it against the lid of the gun lock.
- B. While depressing and holding the release button (momentary switch), push and then pull the weapon towards the lid of the gun lock to release it from the lock.

Note: One handed operation is possible utilizing the optional 8 second timer. The timer will unlock the lock for 8 seconds following activation of the momentary switch. If the gun is not pulled out of the lock within 8 seconds after activation of the momentary switch, the lock will automatically re-lock.

Important: If lid of the lock does not release, press in on the lid to release tension and reactivate the release button (unless timer is still active).

## VII. Securing the Weapon:

- A. Push weapon firmly and completely into the lock mechanism and firmly close lid.
- B. Check to insure that the lid is locked.
- C. If the lid does not lock, re-seat the weapon firmly and completely into the lock assembly and again apply pressure to the lock lid to seat and re-lock it.


Note: The G4904 Series lock mechanism has a unique override. In the event of power failure, the lock can be opened using a standard handcuff key or other high security key.

## VIII. To open the lock with the manual override key:

- A. Fully insert the handcuff key into the hole provided in the lock head. Turn the key 1/4 turn to the left (counter-clockwise). Pull open the lid or pull on the weapon to open it.


Important: Return the key to its original position or remove key completely to close and re-lock the lock.

## IX. Installing Optional 8 second timer (3-Wire)

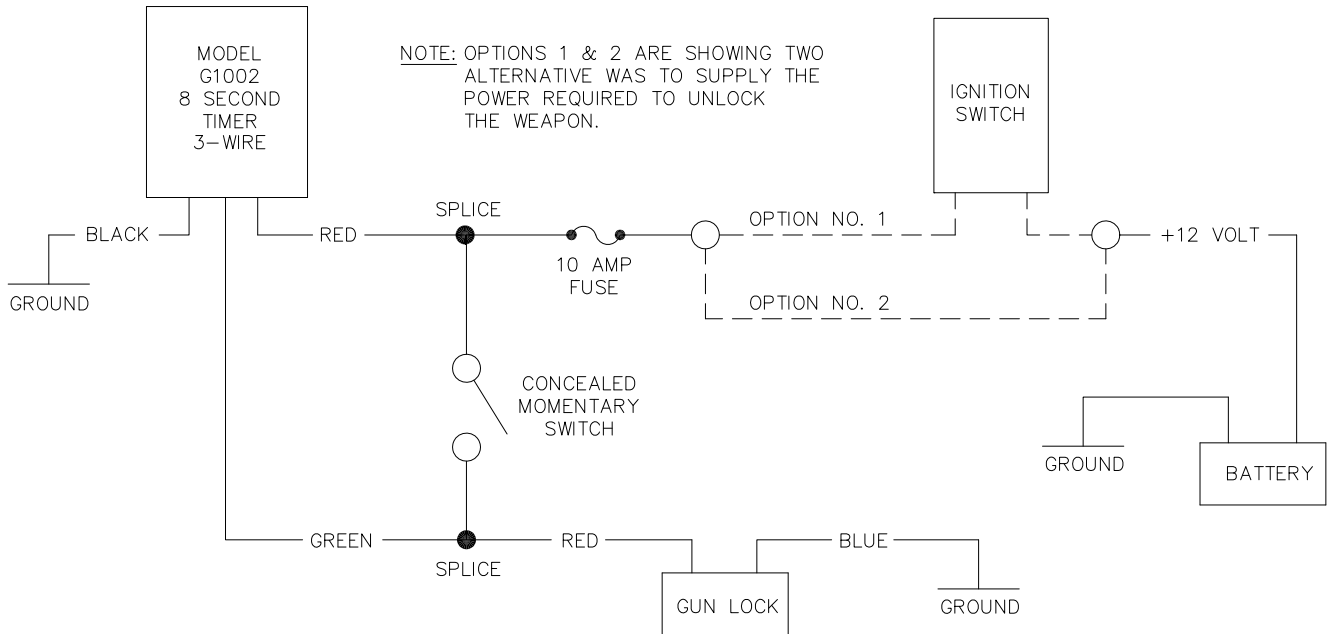

Note: If for any reason the gun lock momentary switch remains activated, such as, the button is damaged, and/or shorted, the unit will time out in 8 seconds and can not be operated again until the defective switch is repaired, thus saving the gun lock solenoid. Do not connect directly to power for more than 20 seconds!

## X. Installation Complete

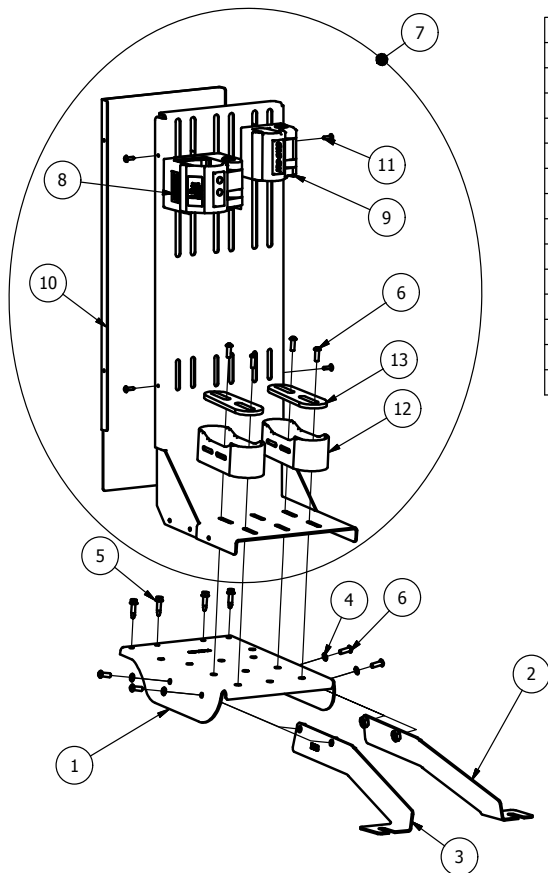

PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	3G7036-01	GUN RACK MOUNT BASE
2	1	3G7036-02	GUN RACK MOUNT FOOT - DRIVER
3	1	3G7036-03	GUN RACK MOUNT FOOT - PASSENGER
4	4	3X34b	1/4" INT TOOTH LOCK WSHR
5	4	3X110	1/4"-14x1" SELF DRILLING SCREW
6	8	3X184	1/4-20x0.75, SBHCS, BLACK OXIDE
7	1	3G7009APackage	GUN RACK CHAIR
8	1	G4904-NPG	GUN LOCK
9	1	G4904H	GUN LOCK
10	1	3G7009C	PLASTIC BACKING
11	4	3X143	8-32 X 5/8 PHIL PAN HD MS
12	2	G4962-002	BUTT PLATE
13	2	3G4963-002	FOAM PAD

\* = QTY MAY VARY DEPENDING ON CONFIGURATION  
 \*\* = ITEM MAY VARY DEPENDING ON CONFIGURATION