INSTALLATION GUIDE


RWG57S15 REAR WINDOW GUARDS 2015 - CURRENT SUBURBAN



STRONG | RELIABLE | SECURE

pro-gard.com 800.480.6680

THESE COMPONENTS ARE REQUIRED TO INSTALL THE PRO-GARD REAR WINDOW GUARDS

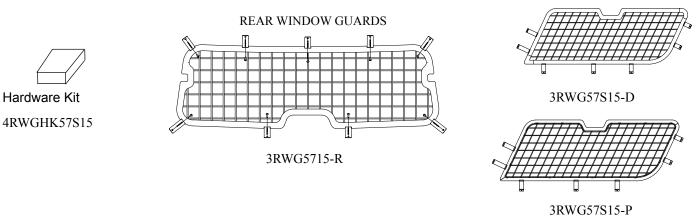

I. Refer to the diagram above to verify all parts were received.

II. The following tools will be required to complete the installation:

- 1. Phillps Head Screw Driver
- 3. 3/32" Diameter Drill Bit
- 5. T30 Torx Bit
- 7. T50 Torx Bit

- 2. 9/32" or 7 mm Deep Well Socket
- 4. 3/8" Drive Ratchet
- 6. T45 torx Bit

III.Read all instructions carefully before starting the assembly process.



Locate all wiring, fuel lines, brake lines, and /or cooling lines before drilling holes or installing any fasteners.

IV. Driver and Passenger Window Guard Installation

- A. Remove the trim on the floorboard that surounds the rear door latch.
- B. Remove the four covers from the pillar trim panels, and unbolt using a 9/32' or 7 mm socket. Disconnect the speaker and remove the trim (Fig. 1).
- C. Remove small trim pieces at the bottom of the passenger door openings. Remove third-row seat and seat belts with a T50 torx bit.
- D. Remove cargo hooks from lower side trim at the back of the vehicle using a T45 torx bit (Fig. 2).



Figure 1

pro-gard.com 800.480.6680

- E. Disconnect 12V power supply connector and remove trim panels from the vehicle.
- F. Position corresponding window guard into the window sturcture of the vehicle. Once seated, apply pressure to the rear window guard (Fig 3). Secure the center lower bracket first to the vehicle with the provided self-tapping screws. It may be necessary to drill a 3/32" pilot hole before using the self-tapping screws (use a phillps head driver).
 - A. Driver Side Next secure the forward most lower bracket (Fig 4). Ensure that the window guard is level with the headliner and continue securing remaining brackets with supplied hardware.
 - B. Passenger Side Next secure the rear most upper bracket. Ensure that the window gaurds are level with the headliner and continue securing remaining brakets with supplied hardware.
- G. Hold the interior trim panels in place over the window guard. Carefully mark the areas where the trim contacts the window guard brackets, and trim away these areas on the panels so that the panels will fit propery into place over the armor. Then, re-install the interior trim panels.



Figure 2



Figure 3



Figure 4

V. Rear Hatch Window Guard Installation



Figure 5

Figure 6



Figure 7

- A. Remove the T30 torx bolt holding the grab handle in place (Fig. 5). Disconnect wire attached to the switch.
- B. Gently pry the upper trim panel from the vehicle. Repeat the process for the lower trim panel.
- C. IT IS VERY IMPORTANT TO HAVE FRAME IN THE CENTER OF HATCH. Align the centerline marked on the window frame to the center of the hole (shown in figure 6-7).
- D. With the window guard centered on the vehicle, place tension on the guard, forcing the mounting brackets into position.
- E. Before attaching the window guard, ensure that the rear window defrost wiring is routed correctly behind the window guard (Fig. 8).
- F. Attach the mounting brackets to the vehicle with the provided self-tapping screws. It may be neccessary to drill a 3/32" pilot hole before using the self-tapping screws.

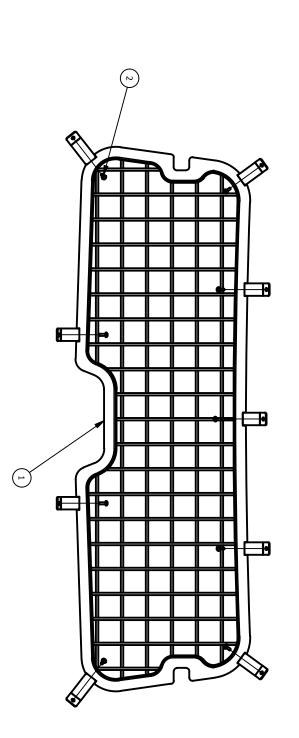


Figure 8

OTE: A second person may be neccessary to secure the window guard to the vehicle while keeping the brackets aligned with the sheet metal.

- G. Hold the OEM lower and upper panels in place over the window guard. Carefully mark the areas where the trim contacts the window guard mounting brackets, and trim these areas on the panels so they will fit properly into place over the guard.
- H. Re-install the OEM Rear Hatch panels to the vehicle.


VI.Installation Complete



REAR WINDOW HATCH GAURD	3RWG5715-R	1	1
DESCRIPTION	PART NUMBER	QTY	ITEM
	RWG57T15A		

2	ITEM		
6	QTY		
3X72	PART NUMBER	4RWGHK5715	
8-32 X 5/8 PHIL PAN HD MS	DESCRIPTION		

REAR WINDOW HATCH GUARD

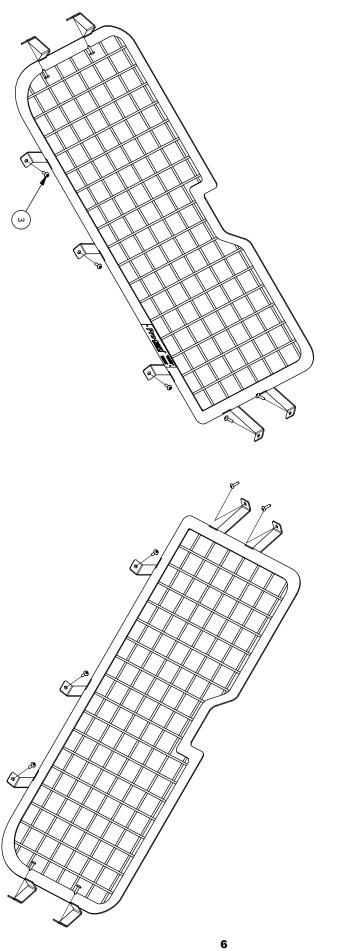

			PARTS LIST
ITEM	ITEM QTY	PART NUMBER	DESCRIPTION
1	1	3RWG57S15-P	REAR SIDE WINDOW GUARD PASSENGER
2	1	3RWG57S15-D	REAR SIDE WINDOW GUARD DRIVER
ω	14	14 3X72	8-32 X 5/8 PHIL PAN HD MS

REAR SIDE WINDOW GUARDS

pro-gard.com 800.480.6680