


INSTALLATION GUIDE

**RWG47UINT20A
REAR WINDOW GUARDS
2020 FORD INTERCEPTOR UTILITY**

Pro-gard[™]
PRODUCTS LLC.

STRONG. RELIABLE. SECURE.

THESE COMPONENTS ARE REQUIRED
TO INSTALL THE PRO-GARD RWG47UINT20A REAR WINDOW GUARDS

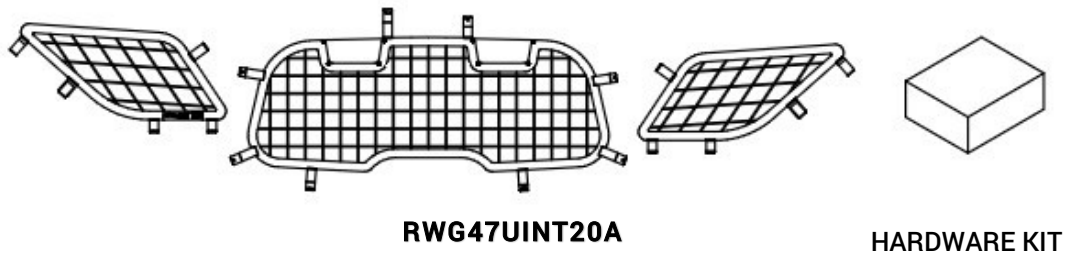

NOTE: Locate all wiring, fuel lines, brake lines and/or cooling lines before drilling holes or installing any fasteners.

I. Refer to the diagram above to verify all parts were received.

II. Tools required:

- A. 3/8" socket B. 7/64" diameter drill bit C. 5/16 socket

III. Read all instructions carefully before beginning the installation process.

IV. Driver and Passenger Window Guard Installation

- A. Remove the side trim, C and D-pillar trim from the cargo area. Note: Trim panels will need to be cut before re-installing.
- B. Carefully insert the 'tab' into the lower slot at the front of the window opening. (See Fig. 1). Once seated secure the guard to the vehicle with the provided self-tapping screws. (See Fig. 2). It may be necessary to drill a 7/64" pilot hole before using the self-tapping screws (use 3/8 socket).
- C. Holding side trim up to the fastened side window guards, mark the location of the brackets just installed. Do the same for the D-pillar trim. Using a razor knife or similar tool, cut rectangular clearance notch 1/2" deep.
- D. Re-install all OEM trim.

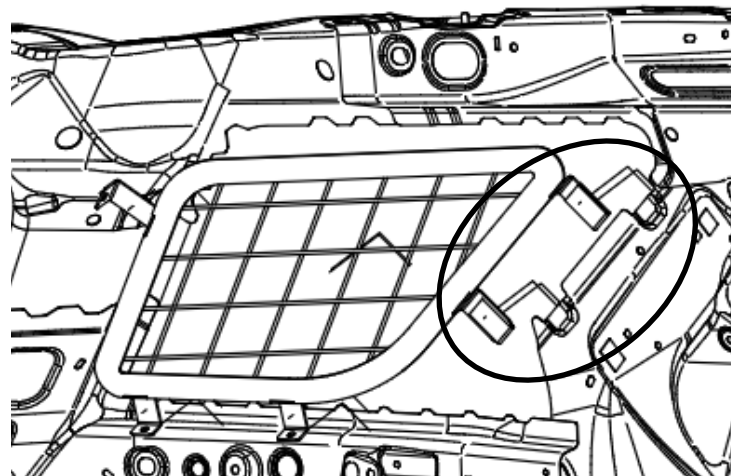


Fig. 1

V. Rear Hatch Window Guard Installation

- A. Remove upper and lower trim.
- B. Remove OEM fasteners from locations shown circled. (Fig. 3)
- C. Hold hatch rear window guard assembly to vehicle and begin to thread bolts removed back into place.
- D. Ensure that assembly is centered within vehicle window opening and tighten bolts with 5/16" socket.
- E. Using 3/8 socket, drive self-tapping screws [3X162] at the bracket locations remaining. (Fig. 3)
- F. Hold upper trim up to frame and mark the bracket locations.
- G. Repeat for the lower trim.
- H. Using razor knife or similar tool, cut rectangular notch 1/2" deep at the marked locations.

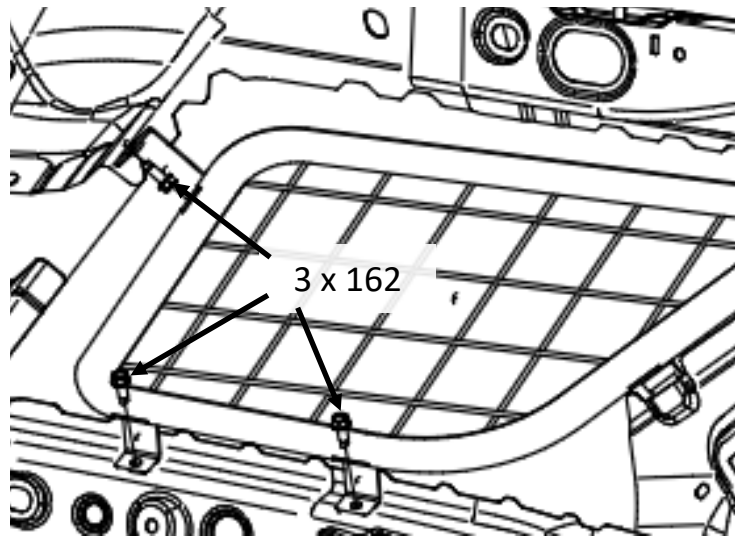


Fig. 2


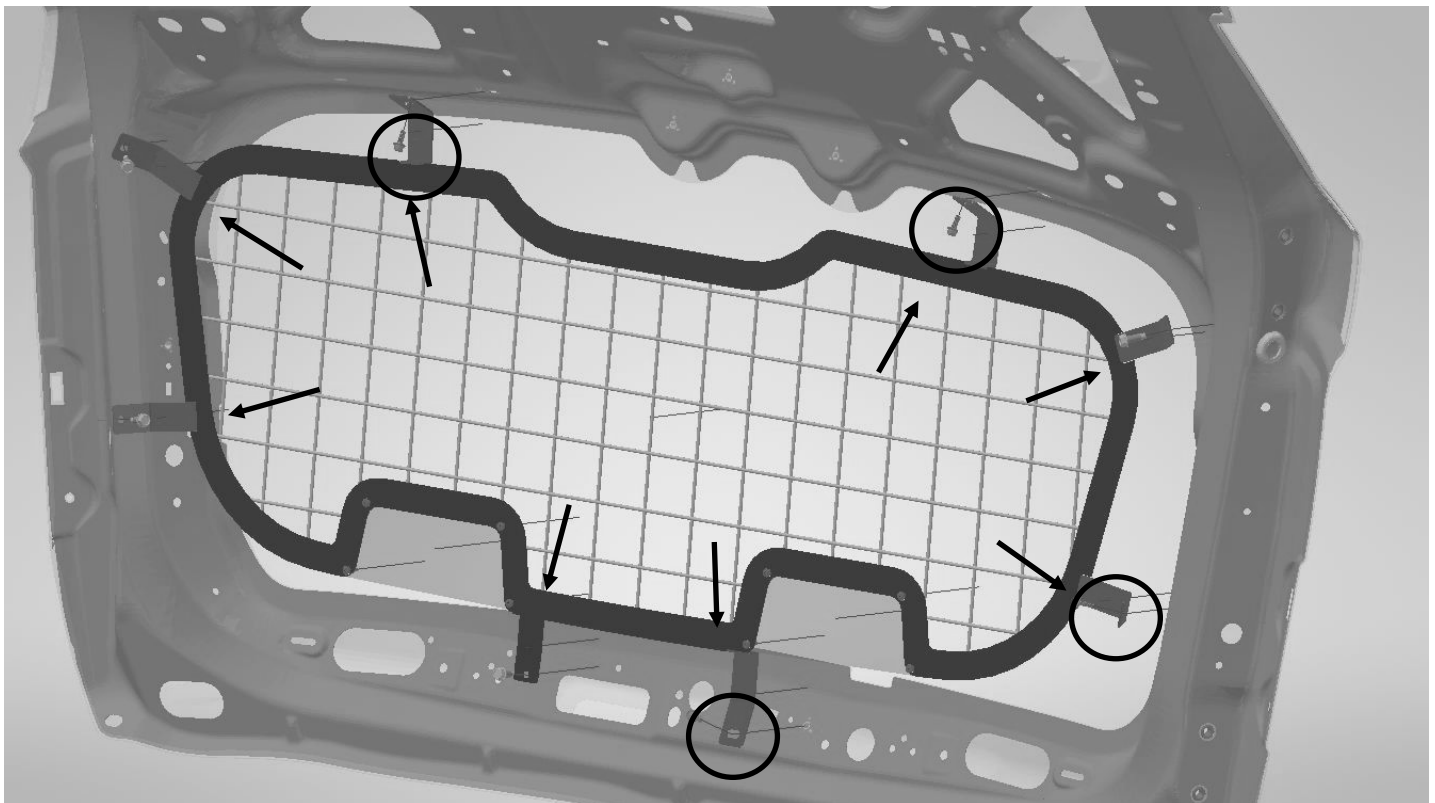


Fig. 3

Installation complete

If you have any problems with this installation or have any questions please call (800-480-6680) and ask for technical assistance.

PARTS LIST		DESCRIPTION
ITEM	QTY	PART NUMBER
1	10	3X162
2	1	4RWG472010-B
3	1	4RWG472020-B
4	1	4RWG472030-B

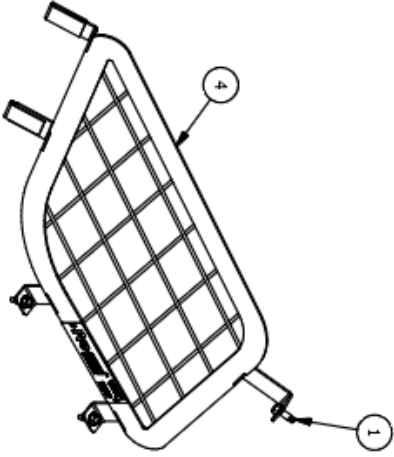

RWG47UINT20A

