

HOW TO ADD FINGERPRINTS

OPTION 1: When locker is open, press the set button. Lightly tap the fingerprint window.

- The fingerprint window light turns blue, put your finger on the window. A beep sounds and the light will turn off. Remove your finger.
- The blue light will turn on, put your finger back on the window. A beep sounds and the light will turn off. Remove your finger.
- The blue light will turn on, put your finger back on the window. Wait for a green light and two beeps to indicate successful registration.

OPTION 2: When locker is closed, press and hold the number key "5" for two seconds. It will beep twice to verify. Enter the previously set passcode or fingerprint. If setting up for the first time, the passcode is 1234. After two beeps, press the number "2" key. Two more beeps will sound.

- The fingerprint window light turns blue, put your finger on the window. A beep sounds and the light will turn off. Remove your finger.
- The blue light will turn on, put your finger back on the window. A beep sounds and the light will turn off. Remove your finger.
- The blue light will turn on, put your finger back on the window. Wait for a green light and two beeps to indicate successful registration.

Note: If the red light is on, the registration failed and the blue light will light up again. Follow the steps above to operate again. If you do not want to finish fingerprint registration, do not operate and the system will automatically exit after 8 seconds. **It is recommended that users register more than one fingerprint in case of emergency.**

HOW TO FACTORY RESET

OPTION 1: When locker is open, press the set button for four seconds. After three beeps, the handgun locker has been restored to factory settings.

OPTION 2: When locker is closed, press and hold the number key "5" for two seconds. It will beep twice to verify. Enter the previously set passcode or fingerprint. After two beeps, press the number "3" key. Two more beeps will sound indicating the handgun locker has been restored to factory settings.

 
After factory reset, the passcode will be restored to 1234 and all fingerprints will be cleared.

Note: Do not store backup keys inside Handgun Locker. If there are 6 beeps during the unlocking process, the batteries are low and should be changed.

Pro-gard™

PRODUCTS LLC.

STRONG. RELIABLE. SECURE.

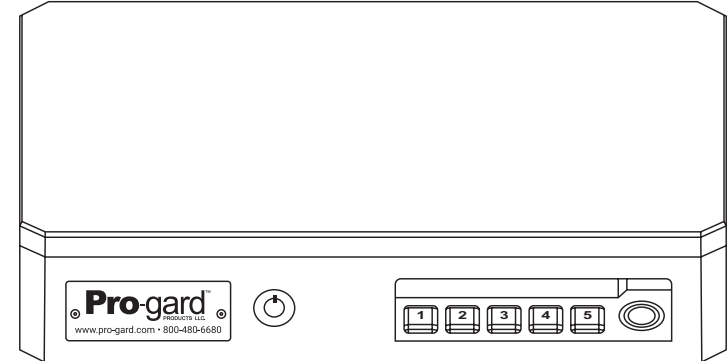

HANDGUN LOCKER



Advanced
Security



Biometric
Fingerprints



Backlit Numeric
Keypad



Quick Access
(<1 S)



2 Backup
Keys

 


Interior LED
Light



Security
Cable

REQUIRES

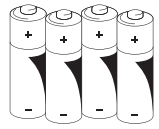

4 AA Batteries
(not included)

TECH SPECS

Dimensions: 12"W x 9"D x 2.5"H

Weight: 6.85 lbs

Processor: Low-power high-performance processor
Fingerprint Recognition: Inductive fingerprint recognition, up to 100 fingerprints can be registered

Material: Steel

Power: 4 AA Batteries (not included)

Standby Time: Approximately 6 months depending on use

Features: Numeric keypad and fingerprint window lights up and plays an audible sound

3 OPENING METHODS



Fingerprint Unlock



Passcode Unlock



Mechanical Unlock


Once power (4 AA batteries) has been added, the electronic lock will engage after two seconds. The locker automatically goes into demo mode. Passcode 1234 or any fingerprint will unlock the box. The user can perform the following operations:

- 1. Fingerprint Unlock:** Put your finger on the fingerprint window. If the fingerprint is correct, the light will turn green, a beep sounds, and the lid will open. If the fingerprint is incorrect, the light will turn red.
- 2. Passcode Unlock:** After the correct passcode has been entered, the fingerprint window flashes green, a beep sounds, and the lid will open. If the passcode is incorrect, the fingerprint window flashes red and beeps twice.
- 3. Mechanical Unlock:** Insert the key into the lock cylinder, and turn key 90 degrees clockwise to unlock. The lid will open.

During the unlocking process, the inside LED light will be on for 5 seconds after the door is opened. LED light will not illuminate for Mechanical Unlock.

Note: *Handgun Locker can be programmed when closed. If there are 6 beeps during the unlocking process, the batteries are low and should be changed. If the electronics switch is in the off position, only Mechanical Unlock will open the Handgun Locker.*

DIAGRAM

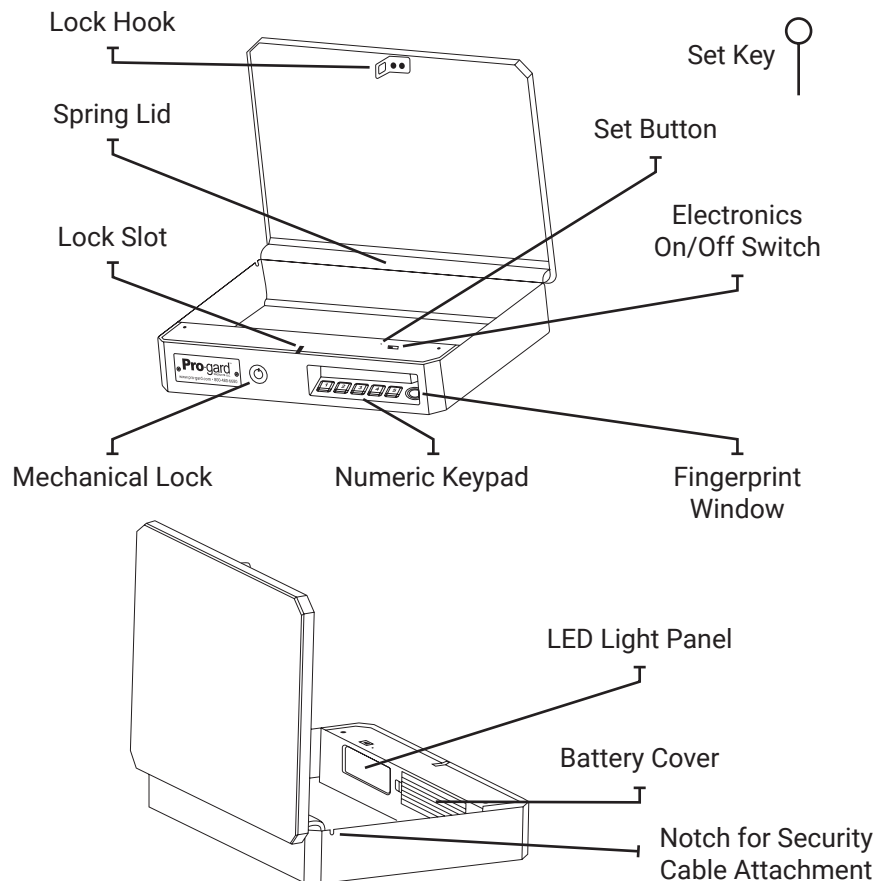

HOW TO CHANGE NUMERIC PASSCODE

Passcode defaults to 1234 unless changed. The new passcode must be at least three digits. If the new passcode is less than three digits, it will beep three times to report an error.

OPTION 1: When locker is open, use the set key to press the set button, enter a new passcode on the numeric keypad, and press the set button again. After two beeps, the passcode has been successfully changed.

OPTION 2: When locker is closed, press and hold the number key "5" for two seconds. It will beep twice to verify. Enter the previously set passcode or fingerprint. If setting for the first time, enter passcode 1234. After two beeps, press the number "1" key, enter new passcode on the numeric keypad, and wait three seconds. After two beeps, the passcode has been changed successfully.