

**INSTALLATION GUIDE**  
**1/4" AIR BAG**  
**FILLER WINGS**


**Pro-gard**<sup>™</sup>  
PRODUCTS LLC.

STRONG | RELIABLE | SECURE

RELEASED 10.17.2018

**pro-gard.com**  
**800.480.6680**

THESE COMPONENTS ARE REQUIRED  
TO INSTALL THE PRO-GARD 1/4" AIRBAG FILLER WINGS



4WHK-01R  
1/4" AIRBAG WING KIT

I. The following tools will be required to complete the installation.

- A. 1/4" or 3/8" drive ratchet with 7/16" socket
- B. 7/16" combination or box end wrench


II. Read all instructions carefully before starting the assembly process.

III. 1/4" Air Bag wing Installation

A. Attach three Wing Mounting Brackets (3P932) to the Driver's Side Air Bag Wing by placing the long leg of the bracket against the inside surface of the wing so the bracket wraps around the edge of the wing (Fig.2). Start the 1/4-20 x 1/2" (3X61) bolts from the opposite side of the wing and out through the bracket so the large Whiz nut (3X16Z) will tighten against the bracket. (Fig. 2).

B. When complete, mount the assembly to the front side of the partition with the remaining 3X61 bolts and 3X16SZ small nuts. Be sure the wing is free to flex inward toward the center of the vehicle (See Fig. 2).

C. Repeat Process for the Passenger's Side

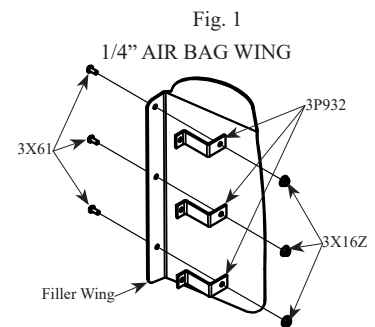

IV. 1/4" Airbag Filler Wing Installation is now complete.

