

4K1826/4K5206-KIT
PRO-GARD PRODUCTS, LLC
CHEVY IMPALA CENTER DIVIDER
INSTALLATION INSTRUCTIONS



- **BE SURE TO CAREFULLY REVIEW ALL INSTRUCTIONS BEFORE INSTALLATION.**
- **BEFORE DRILLING HOLES INTO THE VEHICLE, BE SURE TO LOCATE ANY BRAKE LINES, FUEL LINES, OR ANY OBJECT THAT MAY BE IN THE WAY**
- **PARTITION IS DESIGNED TO BE USED IN '06-'08 CHEVY POLICE IMPALA ONLY**

Center Divider Installation

- A.** Insert the center divider from the passenger side of the vehicle. Be sure to start with the tail of the divider, aimed toward the rear window and speaker deck area. Once you have inserted the divider, press the divider against the seat mount brackets, and then to the partition tabs (**See fig. 1**).

The holes for the center divider are not provided. Add 3X145 Black plastic caps to center divider mountings.

Remove the plate from the center of the partition. Mount the spacer saver recess panel to the partition with the 3P214 bracket mounted.

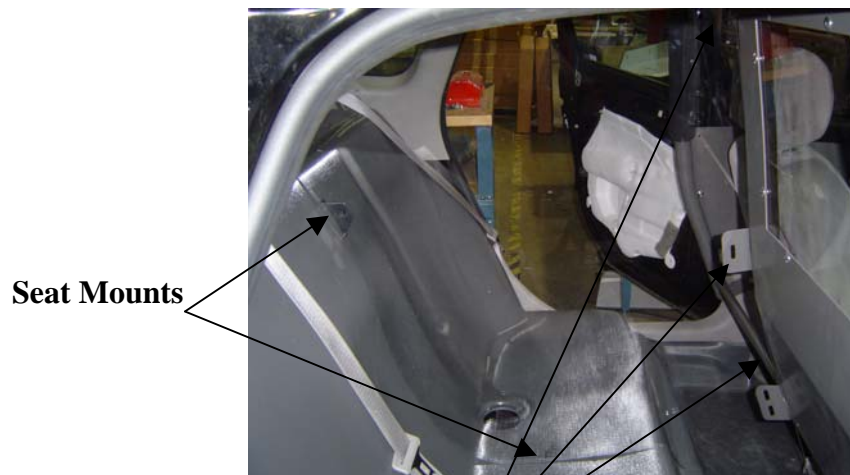


FIG. 1

**Partition
Mounts**

B. Once you've installed the divider, mount the divider deck bracket in place. Slide the T-bracket under the divider tail. Position the T-bracket where desired and use the (3X110) self-tapping screws to fasten the bracket into the speaker deck (**See fig. 2**).

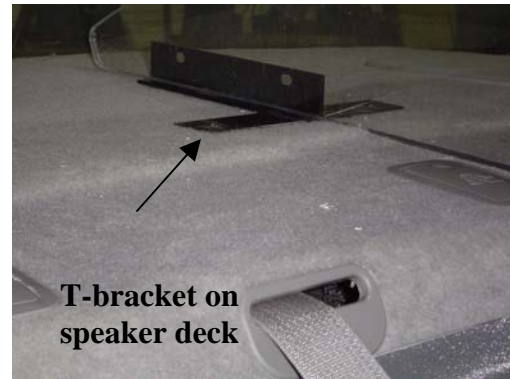


FIG. 2

C. Use the existing holes and slots on the bracket as a template, and drill holes to secure each area using the 3X61 carriage bolts and the 3X16Z whiz nuts.

D. Assemble vent plate over 3 large diameter air holes. Use (black ABS) spacers between plate and center divider. Secure using the 3X07, Philips head screws, and the 3X16 black whiz nuts. (**See fig. 3**). Finalize assembly by covering whiz nuts with black plastic caps.



FIG. 3

IF YOU HAVE ANY QUESTIONS OR CONCERNS PLEASE CONTACT

PRO-GARD PRODUCTS, LLC

PHONE: 317-579-6680

FAX: 317-579-6681