

INSTALLATION GUIDE


4WHK57TB15A
BARRIER WING HARDWARE KIT
2015 - 2020 CHEVY TAHOE

Pro-gard[™]
PRODUCTS LLC.

STRONG | RELIABLE | SECURE

pro-gard.com
800.480.6680

THESE COMPONENTS ARE REQUIRED
TO INSTALL THE PARTITION

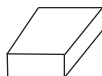


W57BTAH15AB
WING HARDWARE KIT

I. The following tools will be required to complete the installation.

- A. 7/16" Socket & Ratchet

II. Wing Installation

- A. Attach the top polycarbonate panel (4BW5715-05) to the top of the barrier using the existing bolts from the top of the window frame. Adjust panel to suit, and secure fasteners.
- B. Remove the (3) 3X16 nuts and 3X03 bolts located on the upper portion of the drivers side of the barrier. Place bracket 3B929 on the front side of the barrier and secure using the bolts and nuts that were removed (repeat for the passenger side, only using the lower (2) hole locations).
- C. Place the drivers side upper wing (3BW5715-02) behind the air-bag brackets, align the holes, and secure using the provided 3X03 bolts and 3X16 nuts. Repeat process for the passenger side using wing (3BW5715-01.)
- D. Secure the passenger side lower polycarbonate wing (4BW5715-03) to the barrier using the provided 3X03 bolts and 3X16 whiz nuts. Repeat process for drivers side of vehicle using polycarbonate wing (4BW5715-04.)

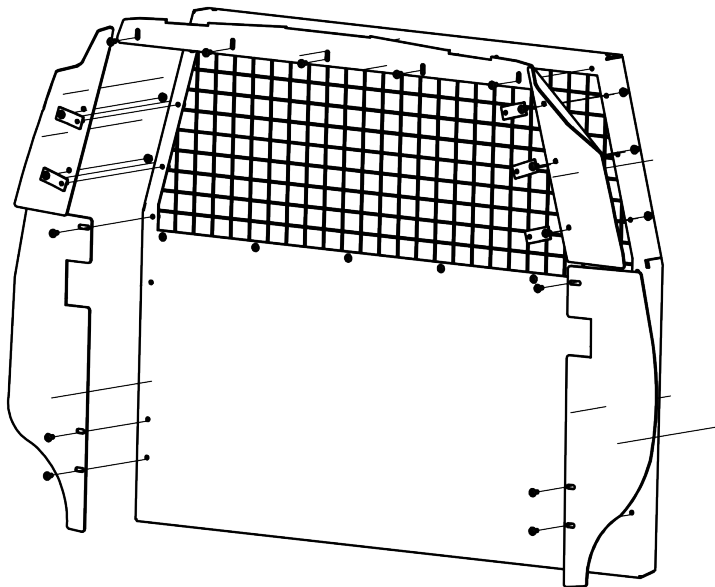

Installation complete!

If you have any problems with this installation than call the toll free number (800-480-6680) and ask for technical assistance.

PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	3WB5715-01	TAHOE BARRIER WING UPPER PASS.
2	1	3WB5715-02	TAHOE BARRIER UPPER WING, DRIVER
3	1	4WB5715-03	TAHOE BARRIER WING LOWER, PASS.
4	1	4WB5715-04	TAHOE BARRIER LOWER WING, DRIVER
5	1	4WB5715-05	TAHOE BARRIER HEADLINER WING
6	9	3X16	1/4-20 WHIZ NUT
7	9	3X03	1/4-20 X 5/8 PHIL TRUSS HD MS
8	5	3B929	BARRIER WING BRACKET

