

INSTALLATION GUIDE

**2015 - 2020 CHEVY TAHOE
SPACE SAVER
AIR BAG WINGS**

Pro-gard[™]
PRODUCTS LLC.

STRONG | RELIABLE | SECURE

**pro-gard.com
800.480.6680**

THESE COMPONENTS ARE REQUIRED
TO INSTALL THE PARTITION





4WK5715T-02

I. The following tools will be required to complete the installation.

A. 7/16" Socket & Ratchet

PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	3W5715A-02P	WING - PASSENGER
2	1	3W5715A-02D	WING - DRIVER
3	6	3P928	MOUNTING BRACKET, A.B WING (Z-BRACKET)
4	12	3X36	1/4-20 X 5/8 CARRIAGE BOLT
5	12	3X16Z	1/4-20 WHIZ NUT

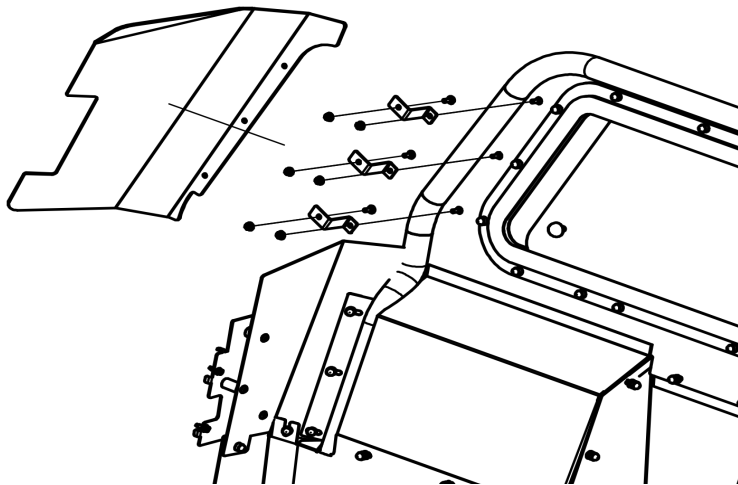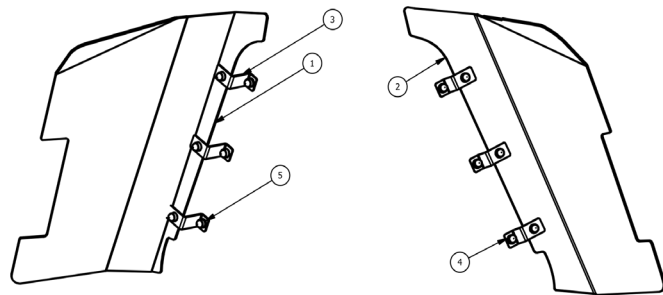

II. Use the diagram to correctly assemble and install the air bag wings.

Step 1. Assemble the passenger and driver side air bag wings by following the diagram.

Step 2. Install air bag or rigid wings on the Pro-gard partition as shown in the diagrams.

Installation complete!

If you have any problems with this installation than call the toll free number (800-480-6680) and ask for technical assistance.