


INSTALLATION GUIDE

**2015 - 2020 Chevrolet Tahoe
STANDALONE CARGO SECURITY COVER
CSC57T15S**


Pro-gardTM
PRODUCTS LLC.

STRONG. RELIABLE. SECURE.

THESE COMPONENTS ARE REQUIRED
TO INSTALL THE STANDALONE CARGO SECURITY COVER

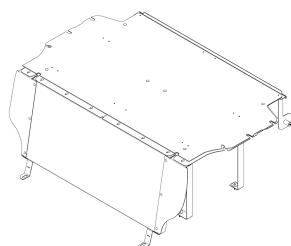

CSC5715S

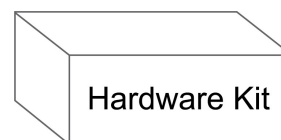

4CSCHK5715S

I. The following tools will be required to complete the installation

- | | |
|--------------------------|-------------------------|
| A. 7/16" Socket / Wrench | C. Phillips Screwdriver |
| B. 10mm Socket | D. 8mm Hex Key |

II. Read all instructions and refer to last page to ensure all parts were received

WARNING: *Locate All wiring, fuel lines, brake lines, coolant lines, and refrigerant lines before drilling any holes or installing any self-drilling fasteners.*

III. Front panel installation

- A. Loosen all OEM fasteners holding the second row seat to the vehicle. Fully remove the (2) nuts closest to the passenger and driver doors.
- B. Lift the second row seats and place the lower support brackets [3B5714-001 and 3B5714-002] over the studs closest to the doors (Fig 1). The brackets rest underneath the OEM seat frame. 3B5714-001 goes on the driver side of the vehicle and 3B5714-002 goes on the passenger side.
- C. Place the front panel [3CSC5715-10] inside the vehicle and align the (4) holes in the bottom flange with the holes on the (2) brackets installed in the previous step. The front panel should lean backwards. Loosely fasten using (4) [3X03] Phillips head screws (Fig 2).

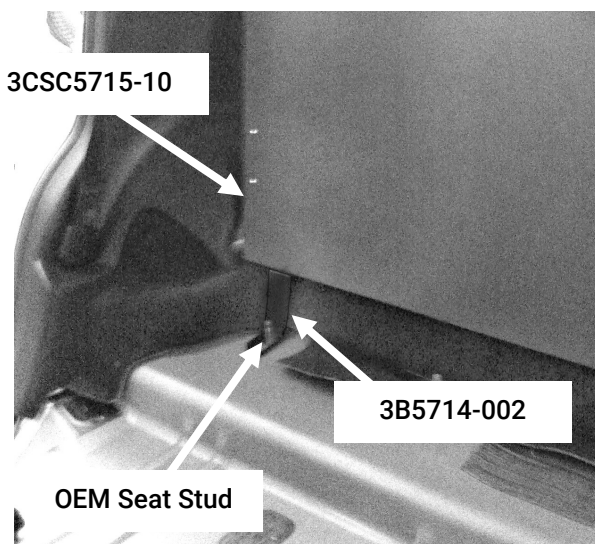


Figure 1


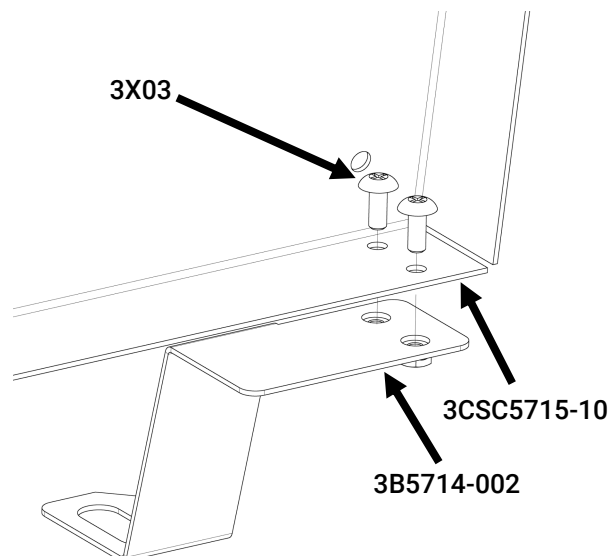


Figure 2


IV. Filler wing installation

- A. Line up the (3) holes in the side of the driver filler wing [3CSC5715-14] with the (3) holes on the front driver side of the front panel. Insert (3) [3X92] carriage bolts into the holes from the front side of the components and loosely secure with (3) [3x16Z] whiz nuts from the back side (Fig 3).
- B. Repeat step A. for the passenger side using the passenger filler wing [3CSC5715-13] and (3) more [3X92] carriage bolts and [3X16Z] whiz nuts.

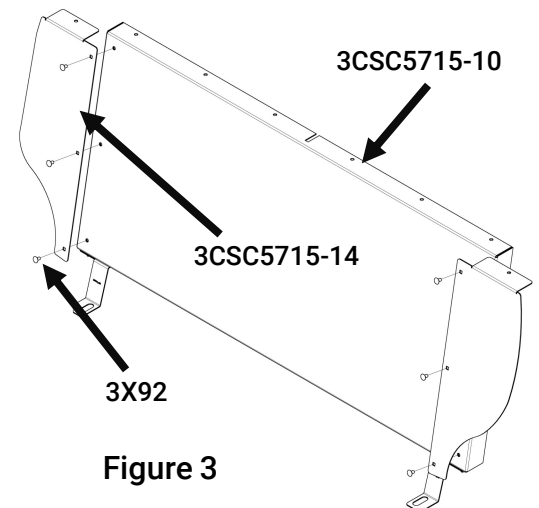


V. Bracket installation

- A. Locate OEM hole locations in the floor of the cargo area on the driver side. Place a front support bracket [3CSC5716-04] over the forwardmost hole in the cargo area and attach to the floor with (1) [3X222] button head screw with (1) [3X224] washer. Loosely secure in place.
- B. Place the center support bracket [3CSC5716-05] over the OEM hole behind the one just used. Use another (1) [3X222] button head screw with (1) [3X224] washer to loosely secure.
- C. Place the rear side bracket [3CSC5716-07-DS] over the second hole of the rear OEM trim. Secure in place with (1) [3X248] bolt using a spacer [4G5070P13] between the bracket and the trim. This bracket utilizes the OEM cargo hook location.
- D. Repeat steps A.-C. for the passenger side using brackets [3CSC5715-04], [3CSC5715-05], and [3CSC5716-07-PS] and the same fasteners used on the driver side. See Figure 4 for bracket layout.

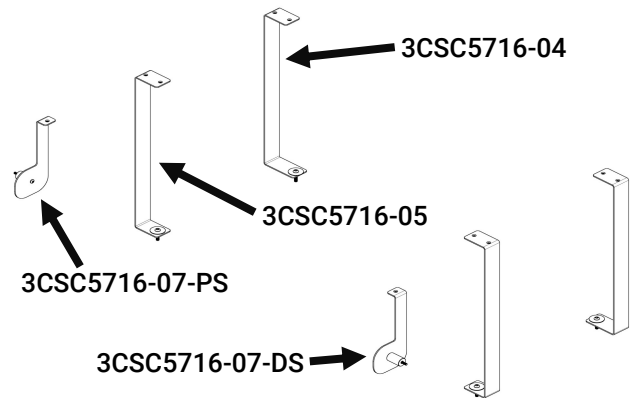

VI. Cross member installation

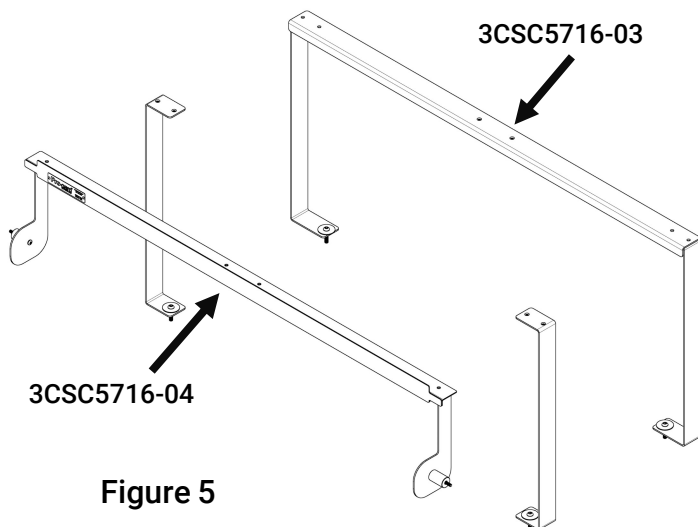

- A. Place the front cross member [3CSC5716-03] over the tops of the front brackets already installed [3CSC5715-04]. Make sure that the (2) holes in the top of each of the front brackets are aligned with the cross member (Fig 5). Fasteners will be installed in a later step.
- B. Place the rear cross member [3CSC5716-06] into position over the tops of the rear brackets already installed [3CSC5716-07-DS],[3CSC5716-07-PS]. Make sure that the hole in the top of each of the rear brackets is aligned with the cross member (Fig 5). Fasteners will be installed in a later step.

VII. Cargo shelf installation

- A. Place the driver side cargo cover panel [3CSC5715-11] into the driver side of the vehicle on top of the brackets, cross members, the front panel, and the filler wing.
- B. Align the (7) holes in the cargo cover panel with the corresponding holes in the brackets and crossmembers. Use (7) Phillips head screws [3X03] to loosely secure the panel in place (Fig 6). The rearmost inside screw requires (1) whiz nut [3X16] in order to be secured.
- C. Insert (4) carriage bolts [3X92] into the slots at the front of the cargo cover panel and loosely secure with (4) whiz nuts [3X16Z] on the underside of the shelf (Fig 7).
- D. Repeat step A.-C. for the passenger side using the passenger side cargo cover panel [3CSC5715-12], (7) [3X03] Phillips head screws, (1) [3X16] whiz nut, (4) [3X92] carriage bolts, and (4) [3X16Z] whiz nuts.
- E. On the under side of the shelf there are two flanges that need to be connected. Align the (3) holes and loosely secure using (3) hex head screws [3X04] and (3) whiz nuts [3X16] (Fig 8).

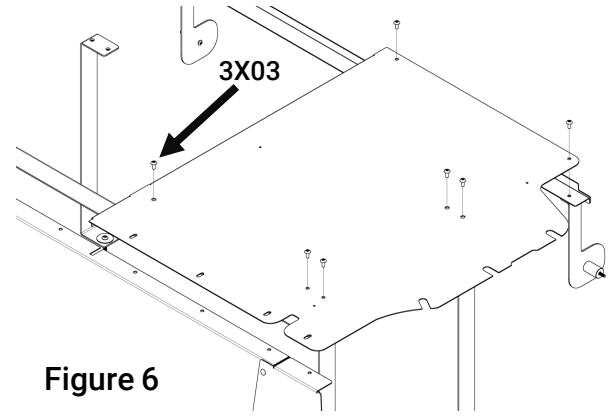


Figure 6

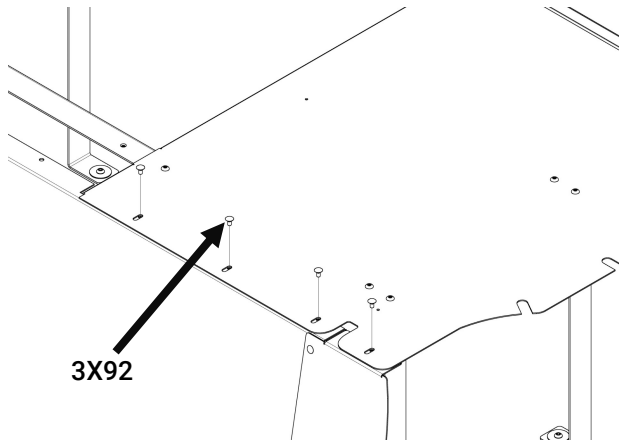


Figure 7

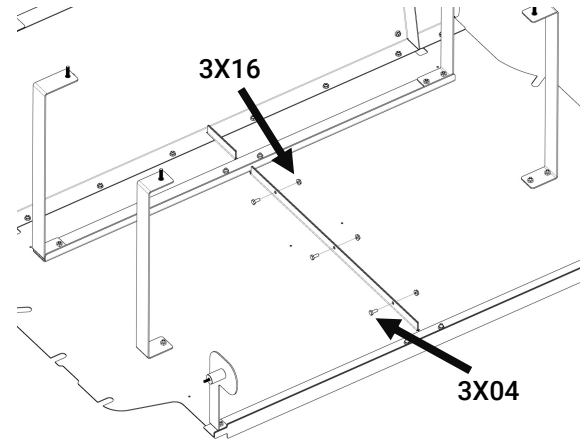


Figure 8

VIII. Finishing steps

- A. All components aside from the rubber mat should now be loosely in place. Move and adjust the panels to achieve the desired fitment.
- B. Tighten all fasteners including the OEM fasteners for the second row seat.
- C. Place the rubber mat on top of the shelf, align the (6) holes with the corresponding holes in the cover panels, and use the (6) push-in plastic rivets [3X246] to secure.

Installation complete

If you have any problems with this installation or have any questions please call (800-480-6680) and ask for technical assistance.

PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	3CSC5715-11	CARGO COVER PANEL DS TAH 15
2	1	3CSC5715-12	CARGO COVER PANEL PS TAH 15
3	2	3CSC5716-04	FRONT SUPPT BRKT TAH 15
4	2	3CSC5716-05	CENTER SUPPT BRKT TAH 15
5	1	3CSC5716-07-DS	REAR SIDE BRKT DS TAH 15
6	1	3CSC5716-07-PS	REAR SIDE BRKT PS TAH 15
7	1	3CSC5716-06	REAR CROSS MEMBER BRKT TAH 15
8	1	3CSC5716-03	FRONT CROSS MEMBER BRKT TAH 15
9	18	3X03	1/4-20 X 5/8 PHIL TRUSS HD MS
10	3	3X04	1/4-20 X 5/8 HEX HD CAP SCR, BLK
11	5	3X16	1/4-20 HEX WHIZ NUT - BLACK
12	2	3X248	M6 X 1.0 X 60MM PAN HD PHIL MS
13	4	3X222	M10-1.5X35 BUTT HD SCR BLK ZN CR3
14	2	4G5070P13	SPACER, PLASTIC, 1-5/8" LONG
15	1	3CSC5715-10	CSC TAHOE FRONT WELDMENT
16	14	3X16Z	1/4-20 LARGE HEX WHIZ NUT-ZINC
17	14	3X92	1/4-20 X 1/2 CARRIAGE BOLT
18	1	3CSC5715-14	CSC TAHOE DRIVER WING
19	1	3CSC5715-13	CSC TAHOE PASS WING
20	1	3CSC5716-09	NEOPRENE MAT TAHOE 15
21	6	3X246	PUSH-IN NYLON RIVET, BLACK
22	4	3X224	3/8 x 1 1/2 Washer
23	1	3B5714-001	BARRIER LOWER MOUNT DRIVER SIDE
24	1	3B5714-002	BARRIER LOWER MOUNT PASSENGER SIDE

