

# **INSTALLATION GUIDE**

**FP5611-S**

**SEAT TO TRUNK FILLER  
PANEL**

**11 - CURRENT**


**DODGE CHARGER**

**Pro-gard**<sup>™</sup>  
PRODUCTS LLC.

**STRONG | RELIABLE | SECURE**

**pro-gard.com  
800.480.6680**

THESE COMPONENTS ARE REQUIRED  
TO INSTALL THE PRO-GARD WINDOW ARMOR SYSTEM

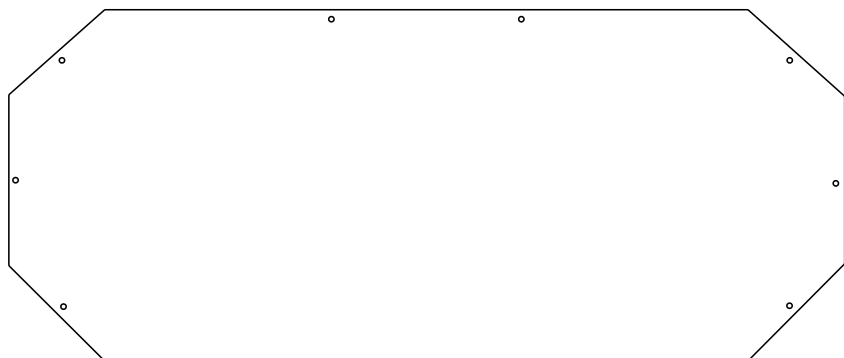

3FP5611-S




HARDWARE KIT

THIS FILLER PANEL MUST BE INSTALLED PRIOR TO ABS TRANSPORT SEAT INSTALLATION

- I. Refer to the diagrams above to verify all parts were received.
- II. The following tools will be required to complete the installation.
  1. Drill with standard #2 Philips driver
  2. Drill bit 7/64" diameter
- III. Filler Panel Installation

1. Remove the rear seat back and bottom cushions from the vehicle if not already removed.
2. Set the filler panel on top of the two lower seat mounting bolt studs. These are the two studs where the seat back would have been mounted at the center of the rear seat. The rough side of the filler panel should be facing the trunk.
3. Center the filler panel in the vehicle so it covers the entire trunk opening. Install the screws through each of the holes in the filler panel. The supplied screws are a Type A-self tapping but sometimes it is necessary to drill a 7/64" pilot hole.

Fig. 1

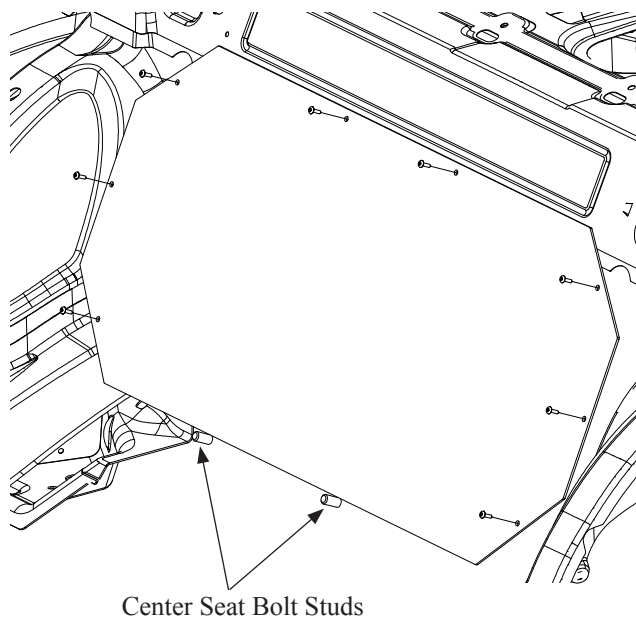

- IV. Installation is now complete.