

**W52I06
PARTITION WING
INSTALLATION INSTRUCTIONS
FOR 2006-2008 CHEVY IMPALA**




NOTE: Carefully review the components below and familiarize yourself with these parts. If there are any missing parts, call (317) 579-6680 and ask for "Customer Service", or circle the missing part on the sheet and fax it to:

"Pro-Gard Customer Service"
@ (317) 579-6681

NOT AIRBAG COMPATIBLE

Wing Installation

1. Using the existing 3 holes provided in the top corners of the partition, mount the wings (4W52D driver and 4W52P passenger) using the 3X61 carriage bolts and the 3X16Z whiz nuts.

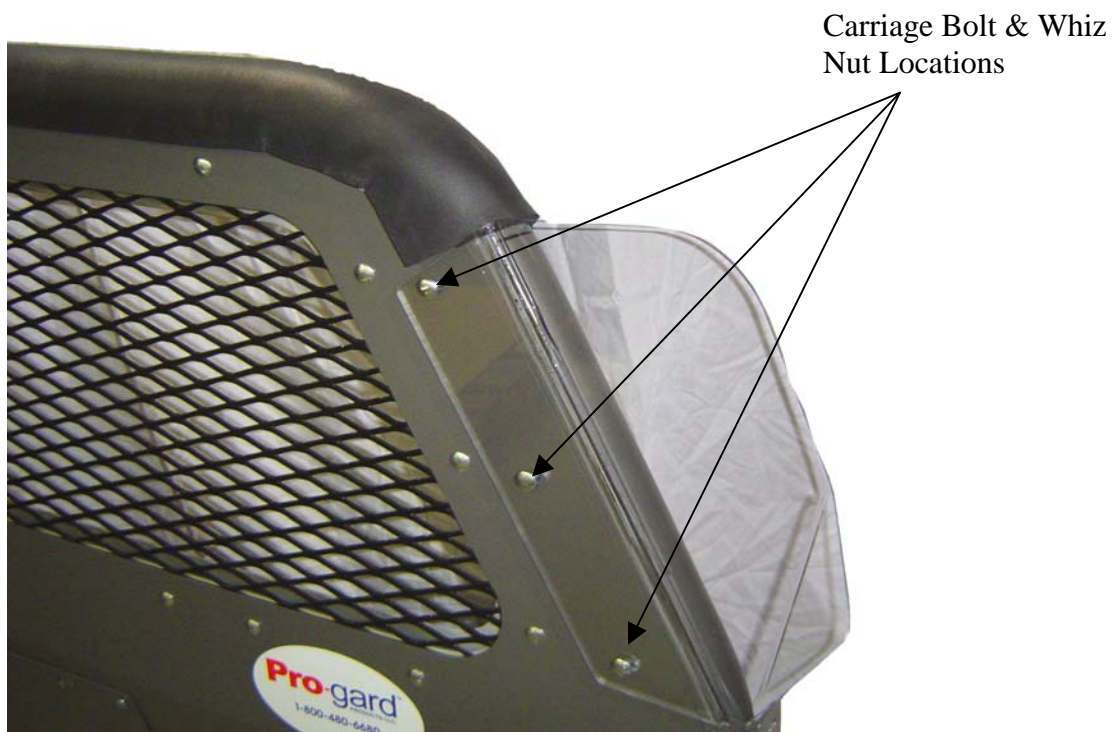

2. The hardware to mount the wings will be included in the hardware kit. See hardware below. **Note that the bolt heads are located on the back of the wings and the partition toward the seat area.**



1/4-20-WHIZ WASHER
3X16Z
(6) EACH



1/4-20X 1/2 CARRIAGE
BOLT
3X61
(6) EACH

IF THERE ARE ANY QUESTIONS OR CONCERNS PLEASE CONTACT

PRO-GARD PRODUCTS, LLC
PHONE: 317-579-6680