


INSTALLATION GUIDE
STANDARD PARTITION
2013 - CURRENT
FORD POLICE INTERCEPTOR

Pro-gardTM
PRODUCTS LLC.


STRONG | RELIABLE | SECURE

pro-gard.com
800.480.6680


THESE COMPONENTS ARE REQUIRED
TO INSTALL THE PRO-GARD PARTITION SYSTEM

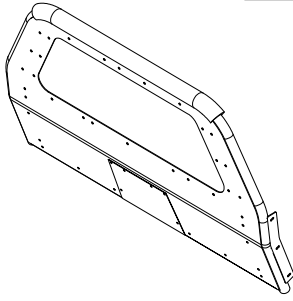

STANDARD PARTITION

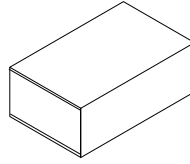

HARDWARE KIT



WING KIT

I. Refer to the diagram on the last page of these instructions to verify all parts were received.

II. The following tools will be required to complete the installation.

- A. 1/4" drive ratchet with 7/16" socket
- B. 3/16" Allen key
- C. 1" Hole saw
- D. Drill with 3/8" Socket

III. Read all instructions carefully before starting the assembly process.

NOTE: Locate all Wiring, Fuel Lines, Brake Lines, and/or Cooling Lines before drilling holes or installing Fasteners.

IV. B-Pillar Bracket Installation

- A. Remove Lower B-Pillar trim on the Passenger-side.
This will be reinstalled after bracket installation. (See Fig. 1)
- B. Place the Passenger B-Pillar bracket (3P3601P) against the B-Pillar face.
- C. Orientate the B-Pillar bracket so the bottom locating tab fits into the Seat Belt Retractor Pocket on the vehicle B-Pillar and the formed locating flanges wrap around the vehicle B-Pillar. Push up and over on the Bracket until the locating tab is at the top of the pocket and the flanges are tight against the vehicle B-Pillar edge. Insuring that the bracket is located correctly, using the supplied Self-Drilling screws (3X162) secure the B-Pillar bracket to the vehicle B-Pillar. (See Fig. 2A & 2B)

NOTE: It is critical that the seat belt strap be on the inside of the B-Pillar bracket. Test the seat belt to confirm that there is no interference and that it functions properly.

FIG. 1

PASSENGER SIDE SHOWN

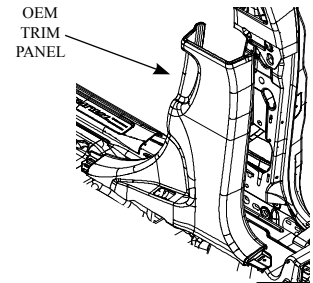


FIG. 2A

PASSENGER SIDE SHOWN


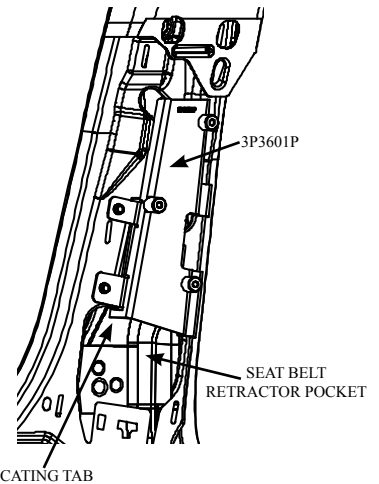


FIG. 2B

PASSENGER SIDE SHOWN

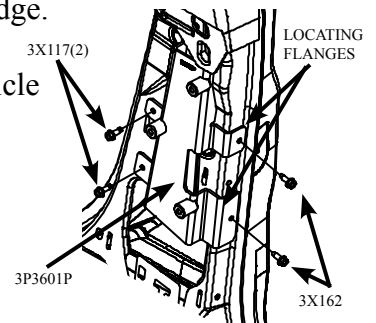


D. Using the Driver B-pillar bracket (3P3601D) repeat process on Driver-side of the vehicle.

V. Drilling B-pillar Trim Panels

FIG. 3

PASSENGER SIDE SHOWN

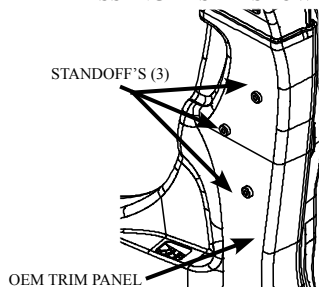

A. Carefully align the template per their included instructions on to the Driver-side trim panel. Using a 1" Hole Saw drill the clearance holes as marked on the template.

B. Replace the trim panel, insuring that the standoff's protrude through the panel. (See Fig. 3)

C. Repeat process on the Passenger-side trim panel.

VI. Installing Partition Mounting Plates

A. Attach the Passenger-side Mounting Plate (3P3602P) using the supplied 5/16-18 x 3/4" Button head screws (3X149) to the Standoff's protruding through the B-pillar trim. Hand tighten fasteners only. (See Fig. 4)

B. Repeat process on the Driver-side

VI Partition Installation

A. Due to the weight and size of the partition, assistance from another party is highly recommended. Insert the partition into the vehicle, lift and position the partition so that it aligns with the Partition Mounting Plates, using the supplied 1/4-20 x 5/8" Carriage Bolts (3X36) and 1/4-20 Whiz nuts (3X16Z) secure the Partition to the Mounting Plates. Hand tighten fasteners only. (See Fig. 5)

B. Audit the overall installation for fit and function of all componets, insure all fasteners are tight.

VII. Filler Wing Installation

A. The Filler Wings and their mounting hardware are packed in separate box marked Wing Kit. Install the Filler Wings according to their included Install Instructions.

VII. Seat Protector Installation **Optional Product**

A. The Seat Protector(s) and their mounting hardware are packed in separate box. Install the Seat Protector(s) according to their included Install Instructions.

VIII. Installation is now complete.

FIG. 4

DRIVER'S SIDE SHOWN



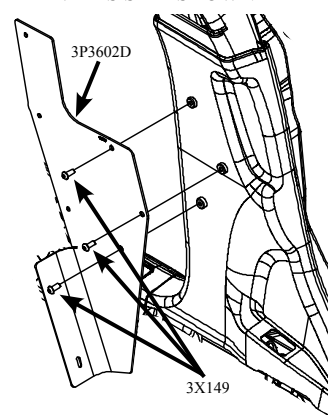




FIG. 5

DRIVER'S SIDE SHOWN

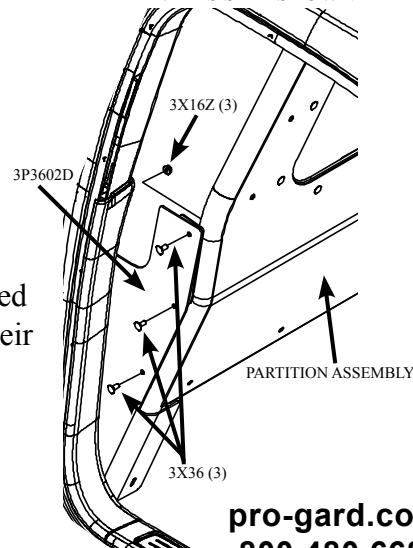

PARTS LIST				DESCRIPTION
ITEM	QTY	PART NUMBER		
1	1	VARIES	PARTITION ASSEMBLY	
2	1	3P3601P	B-PILLAR BRACKET, PASSENGER	
3	1	3P3601D	B-PILLAR BRACKET, DRIVER	
4	1	3P3602P REV B	MOUNTING PLATE, PASSENGER	
5	1	3P3602D-REV B	MOUNTING PLATE, DRIVER	
6	6	3X36	1/4-20 x 5/8" CARRIAGE BOLT	
7	18	3X16Z	1/-20 WHIZ NUT	
8	6	3X149	5/16-18 x 3/4" BSHCS, BLK	
9	8	3X16Z	1/4 X 3/4 SELF DRILL SCREW	
10	1	3SP3604	LOWER EXT. PANEL, FULL WIDTH	
11	1	3SP3602P	*OPTIONAL* LOWER EXT. PANEL - PASSENGER, SPLIT	
12	1	3SP3602D	*OPTIONAL* LOWER EXT. PANEL - DRIVER, SPLIT	
13	1	3P300I	*OPTIONAL* RECESSED PANEL	

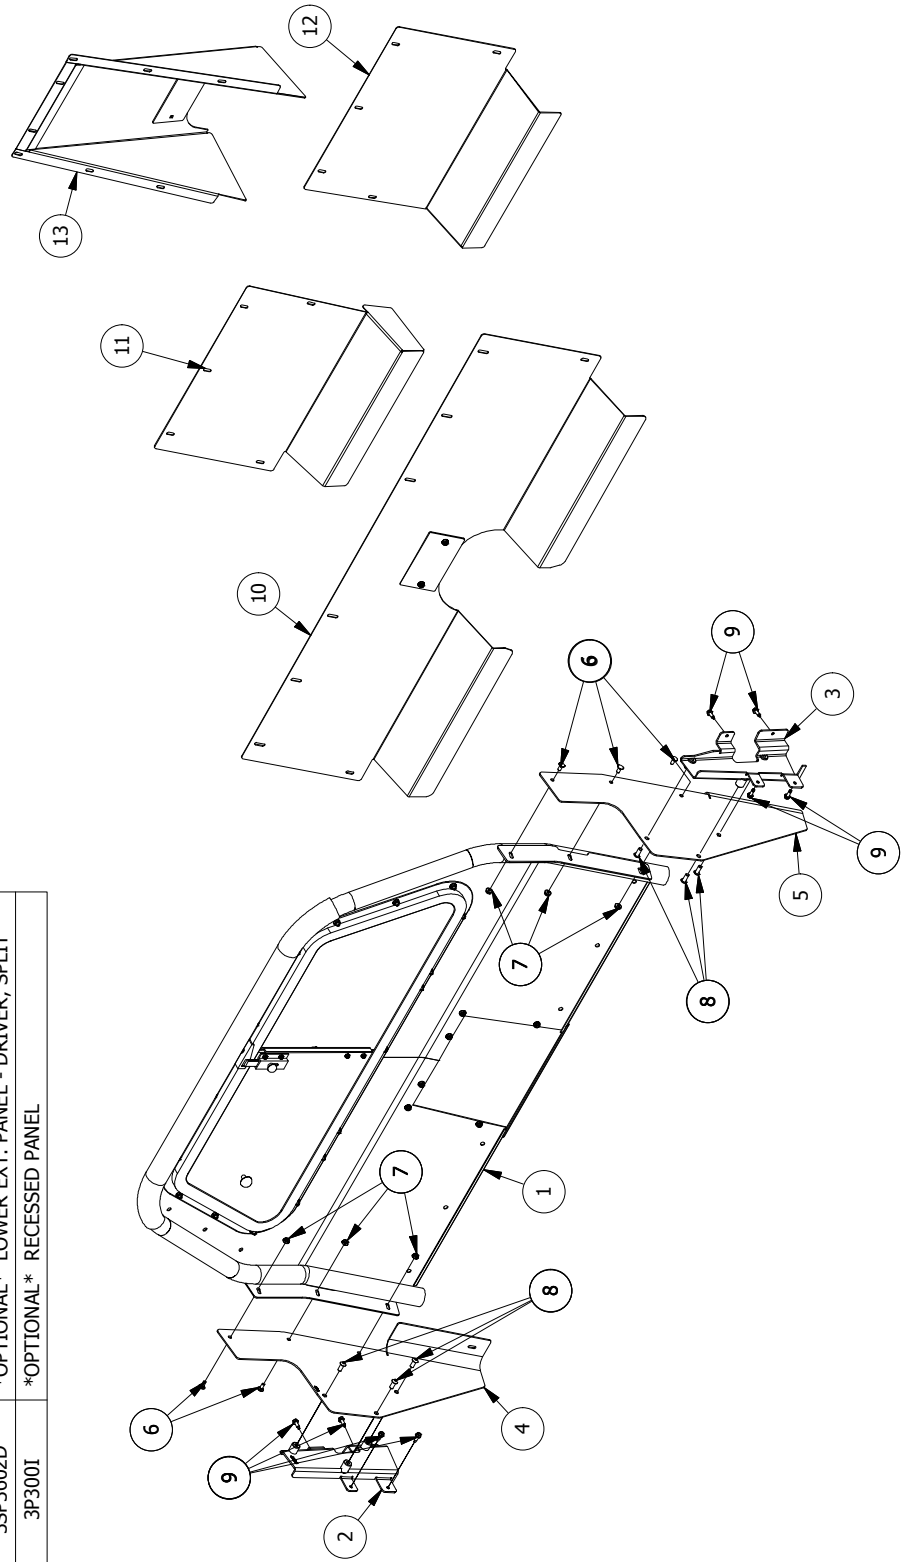




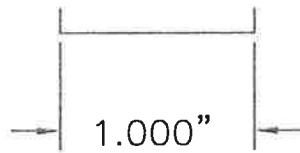
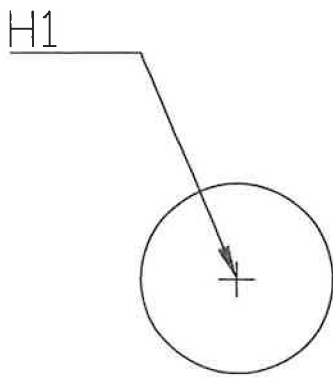


CHECK SCALE



SELECT "NONE" FOR PAGE
SCALING WHEN PRINTING
FROM .pdf FILE

DIRECTIONS

1. CUT ALONG DASHED LINES
2. CUT OUT CROSS HATCHED AREAS
3. ALIGN CUT OUT AREAS WITH THEIR CORRESPONDING BOSS ON OEM B-PILLAR TRIM
4. CENTER PUNCH 3 HOLE LOCATIONS THRU TEMPLATE & DRILL/CUT 1" DIA. HOLE
5. REINSTALL B-PILLAR TRIM PER KIT INSTALL INSTRUCTIONS

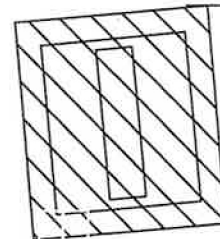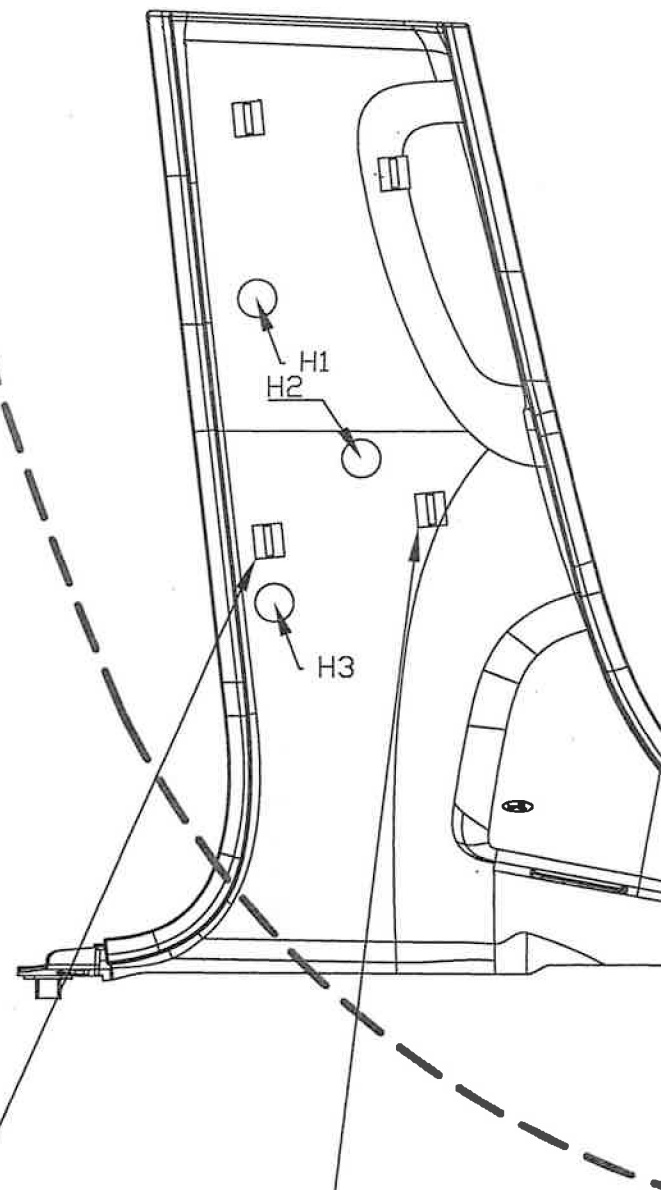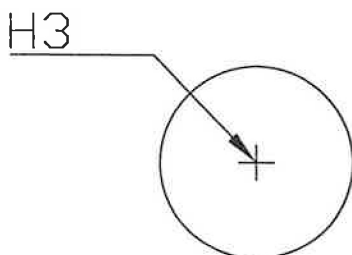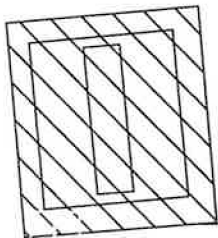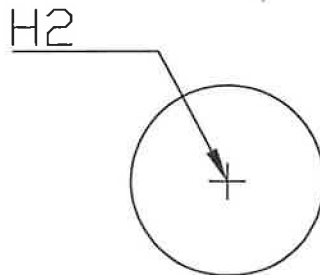


**B-PILLAR TEMPLATE - PASSENGER
2013 - CURRENT FORD POLICE
INTERCEPTOR**

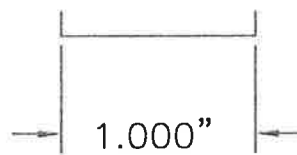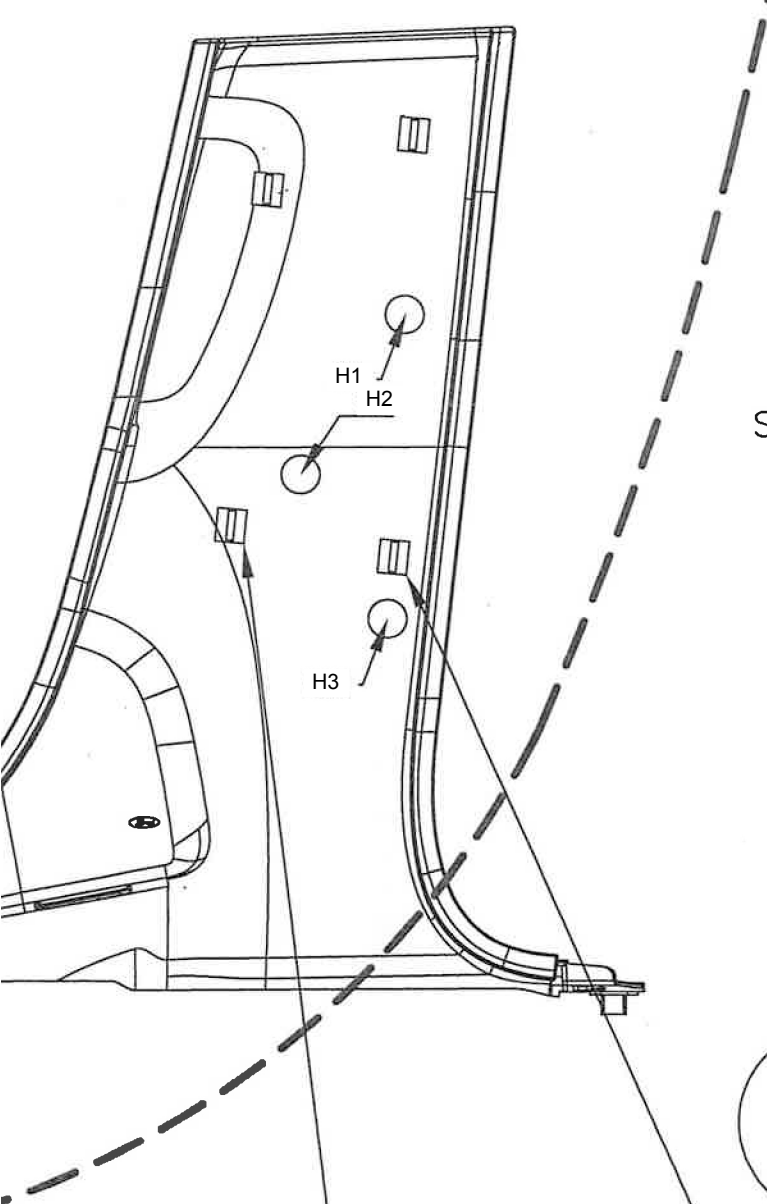

CHECK SCALE

SELECT "NONE" FOR PAGE
SCALING WHEN PRINTING
FROM .pdf FILE



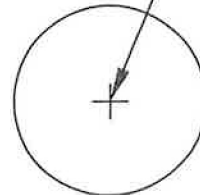


H1


DIRECTIONS

1. CUT ALONG DASHED LINES
2. CUT OUT CROSS HATCHED AREAS
3. ALIGN CUT OUT AREAS WITH THEIR CORRESPONDING BOSS ON OEM B-PILLAR TRIM
4. CENTER PUNCH 3 HOLE LOCATIONS THRU TEMPLATE & DRILL/CUT 1" DIA. HOLE
5. REINSTALL B-PILLAR TRIM PER KIT INSTALL INSTRUCTIONS

H2

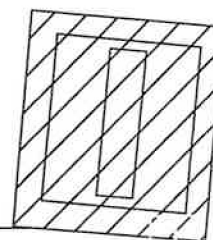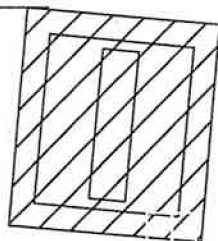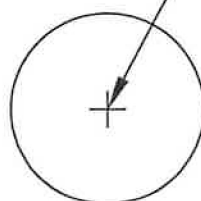

H3

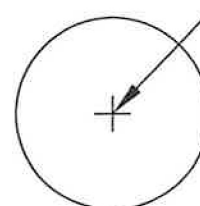

B-PILLAR TEMPLATE - DRIVER
2013 - CURRENT FORD POLICE
INTERCEPTOR