

INSTALLATION GUIDE

SKID PLATE 3SK3614

2013 - CURRENT


FORD INTERCEPTOR

Pro-gard™
PRODUCTS LLC.

STRONG | RELIABLE | SECURE

pro-gard.com
800.480.6680

THESE COMPONENTS ARE REQUIRED
TO INSTALL THE PRO-GARD SKID PLATE SYSTEM

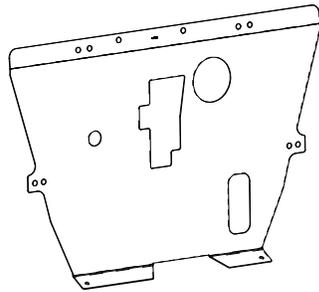


3SK3613 SKID PLATE



HARDWARE KIT

- I. Refer to the parts list at the end of the page to verify all parts were received.
- II. The following tools will be required to complete the installation.
 - A. 3/8" or 1/2" drive ratchet with 9/16" socket, and a 9/16" open or box end wrench and a 15mm socket
- IV. Installing the Skid Plate
 - A. Remove 10 ea. 15mm bolts securing factory underbody splashshield and remove the shield, retain the fasteners for later use
 - B. Install 3SK4714A brackets loosely to rear 2 holes of skid plate using two 3X124 bolts, four 3X121 washers, and two 3X120 locknuts. (See Fig. 1)
 - C. Place the skid plate assembly under the vehicle and hook the mount brackets into the slots on the sub frame and swing the skid plate up into place.
 - D. Check that the Skid Plate access holes align with the appropriate engine features. Using the 10 retained 15mm OEM bolts, starting at the front of the skid plate, insert the middle two bolts loosely to hold the skid plate up in place. install the remaining 8 OEM bolts.
 - E. Torque all bolts down to OEM specs.

FIG 1

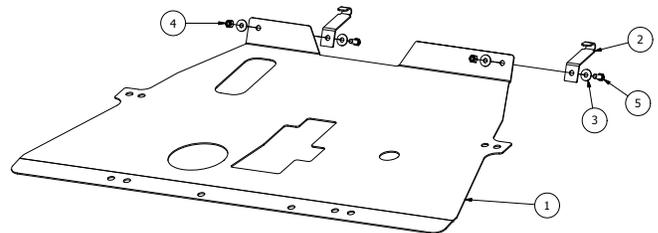

PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	3SK3613	SKID PLATE
2	2	3SK4714A	SKID PLATE MOUNT BRACKET
3	4	3X121	3/8 FLAT WASHER, YZ, 1" O.D.
4	2	3X120	3/8-16, Hex Nylon Insert Locknuts, Grade 8, YZ
5	2	3X131	3/8-16X1, HEX HD CAP SCREW, GR8, YZ