


INSTALLATION GUIDE

**RWG57T21A
REAR WINDOW GUARDS
2021+
CHEVY TAHOE**

Pro-gardTM
PRODUCTS LLC.

STRONG. RELIABLE. SECURE.

THESE COMPONENTS ARE REQUIRED
TO INSTALL THE PRO-GARD RWG57T21A REAR WINDOW GUARDS

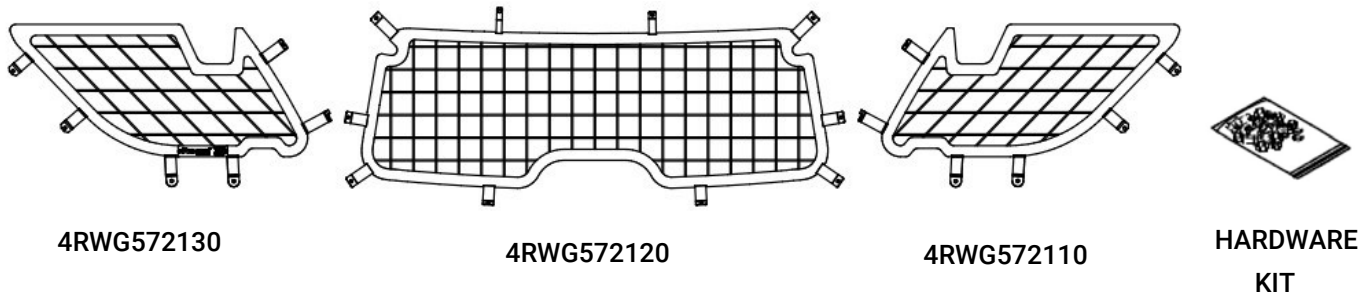

NOTE: Locate all wiring, fuel lines, brake lines and/or cooling lines before drilling holes or installing any fasteners.

I. Refer to the diagram above to verify all parts were received.

II. Tools required:

A. 10mm socket

B. 7/64" diameter drill bit

C. phillips bit

D. 7mm socket

III. Read all instructions carefully before beginning the installation process.

IV. Driver and Passenger Window Guard Installation

A. Remove the side trim, C and D-pillar trim from the cargo area.

NOTE: Trim panels will need to be cut before re-installing.

A. Center 4RWG572110 (driver side window guard) in the window opening. Insert lower locating tab into slot. Tab should rest at the bottom of the slot.(Fig. 1).

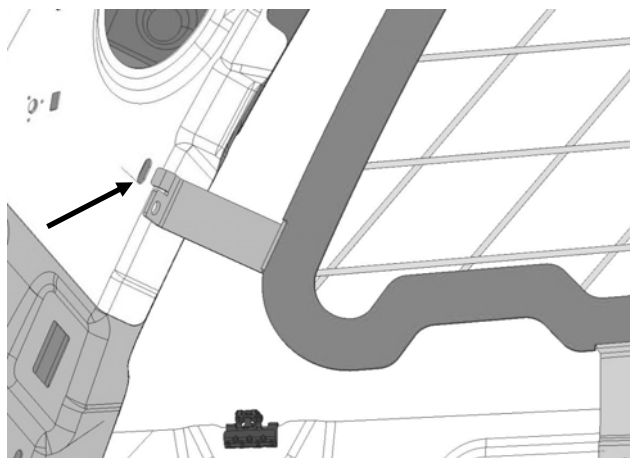


Fig. 1

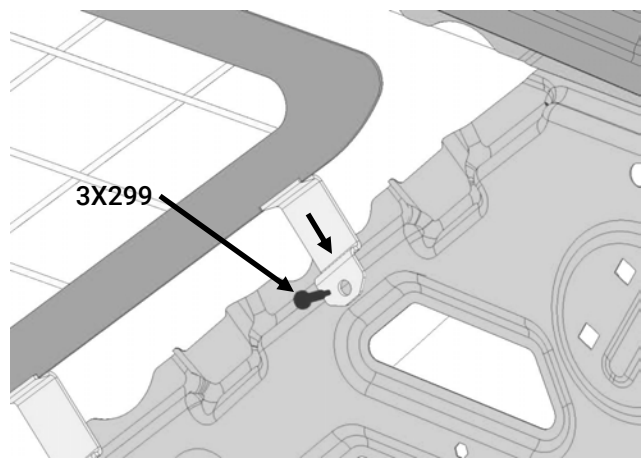


Fig. 2

B. Locate upper forward bracket on the body feature shown and fasten using self-drilling screw [3X299]. Note that frame top edge will be parallel with headliner and now in position. (Fig. 2)

C. Secure the guard to the vehicle with the remaining (5) self-drilling screws [3X299] using a phillips bit (Fig. 3).

D. Repeat steps B through D for the passenger side using 4RWG572130 window guard.

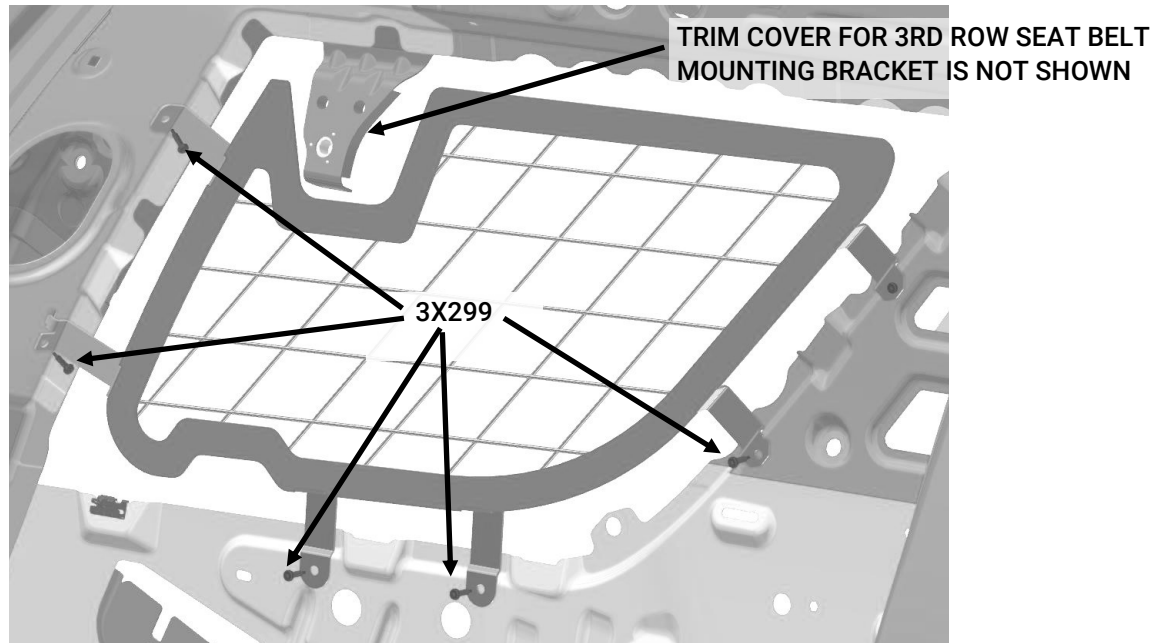


Fig. 3

- E. Holding side trim up to the fastened side window guards, mark the location of the brackets just installed. Do the same for the D-pillar trim. Using a razor knife or similar tool, cut rectangular clearance notch 1/2" deep.
- F. Re-install all factory trim.

V. Rear Hatch Window Guard Installation

- A. Remove upper and lower trim. **NOTE: Trim panels will need to be cut before re-installing.**
- B. Remove outer mounting bolt from wiper motor with 10mm socket. (Fig. 4)

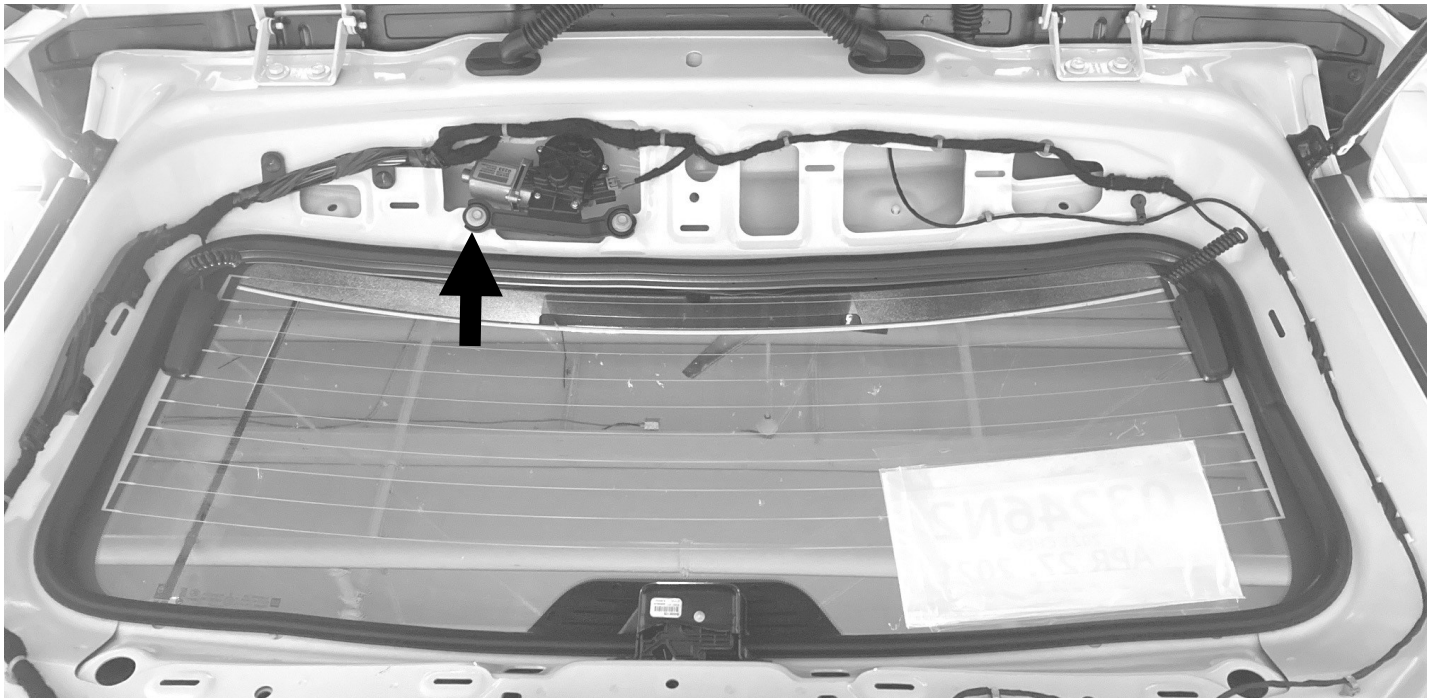


Fig. 4

- C. Center window guard with hatch opening. Before fastening, ensure defrost wiring is routed behind frame. (Fig. 5)
- D. Slide guard frame upper left bracket behind motor mounting and on top of clip nut. Be careful not to knock clip nut off. Align all and re-fasten wiper mounting bolt. (Fig. 6)

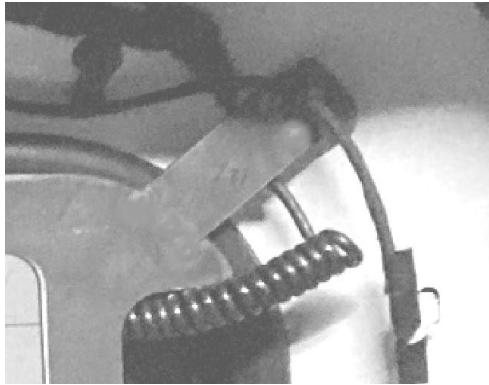


Fig. 5

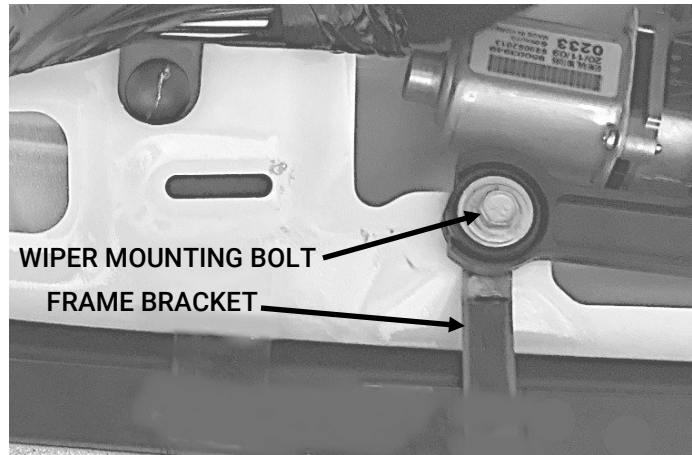


Fig. 6

- E. Place tension on window guard assembly, pressing towards rear glass. Brackets are in location when they touch window gasket.
- F. Drive (9) self-drilling screws [3X299] into the sheet metal using a Phillips bit on all brackets. (Fig. 7)


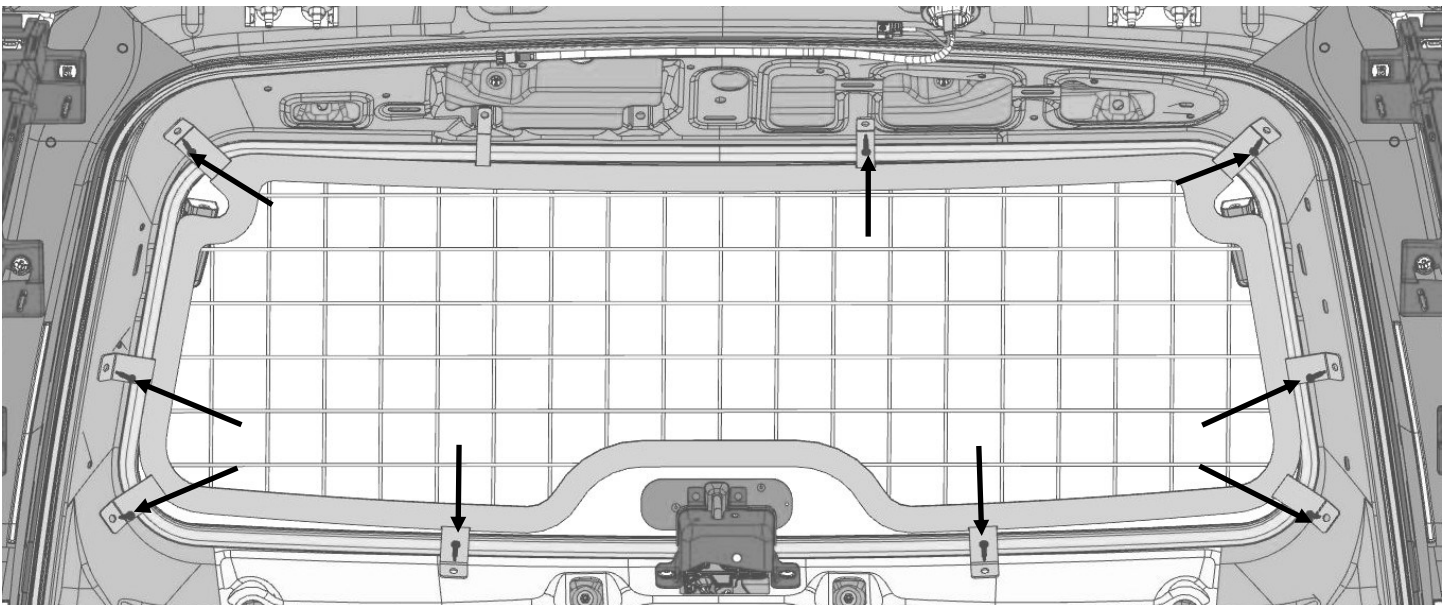


Fig. 7

- G. Hold upper trim up to frame and mark the bracket locations.
- H. Repeat for the lower trim.
- I. Using razor knife or similar tool, cut rectangular notch 1/2" deep at the marked locations.
- J. Re-install all factory trim.

Installation complete

If you have any problems with this installation or have any questions please call (800-480-6680) and ask for technical assistance.

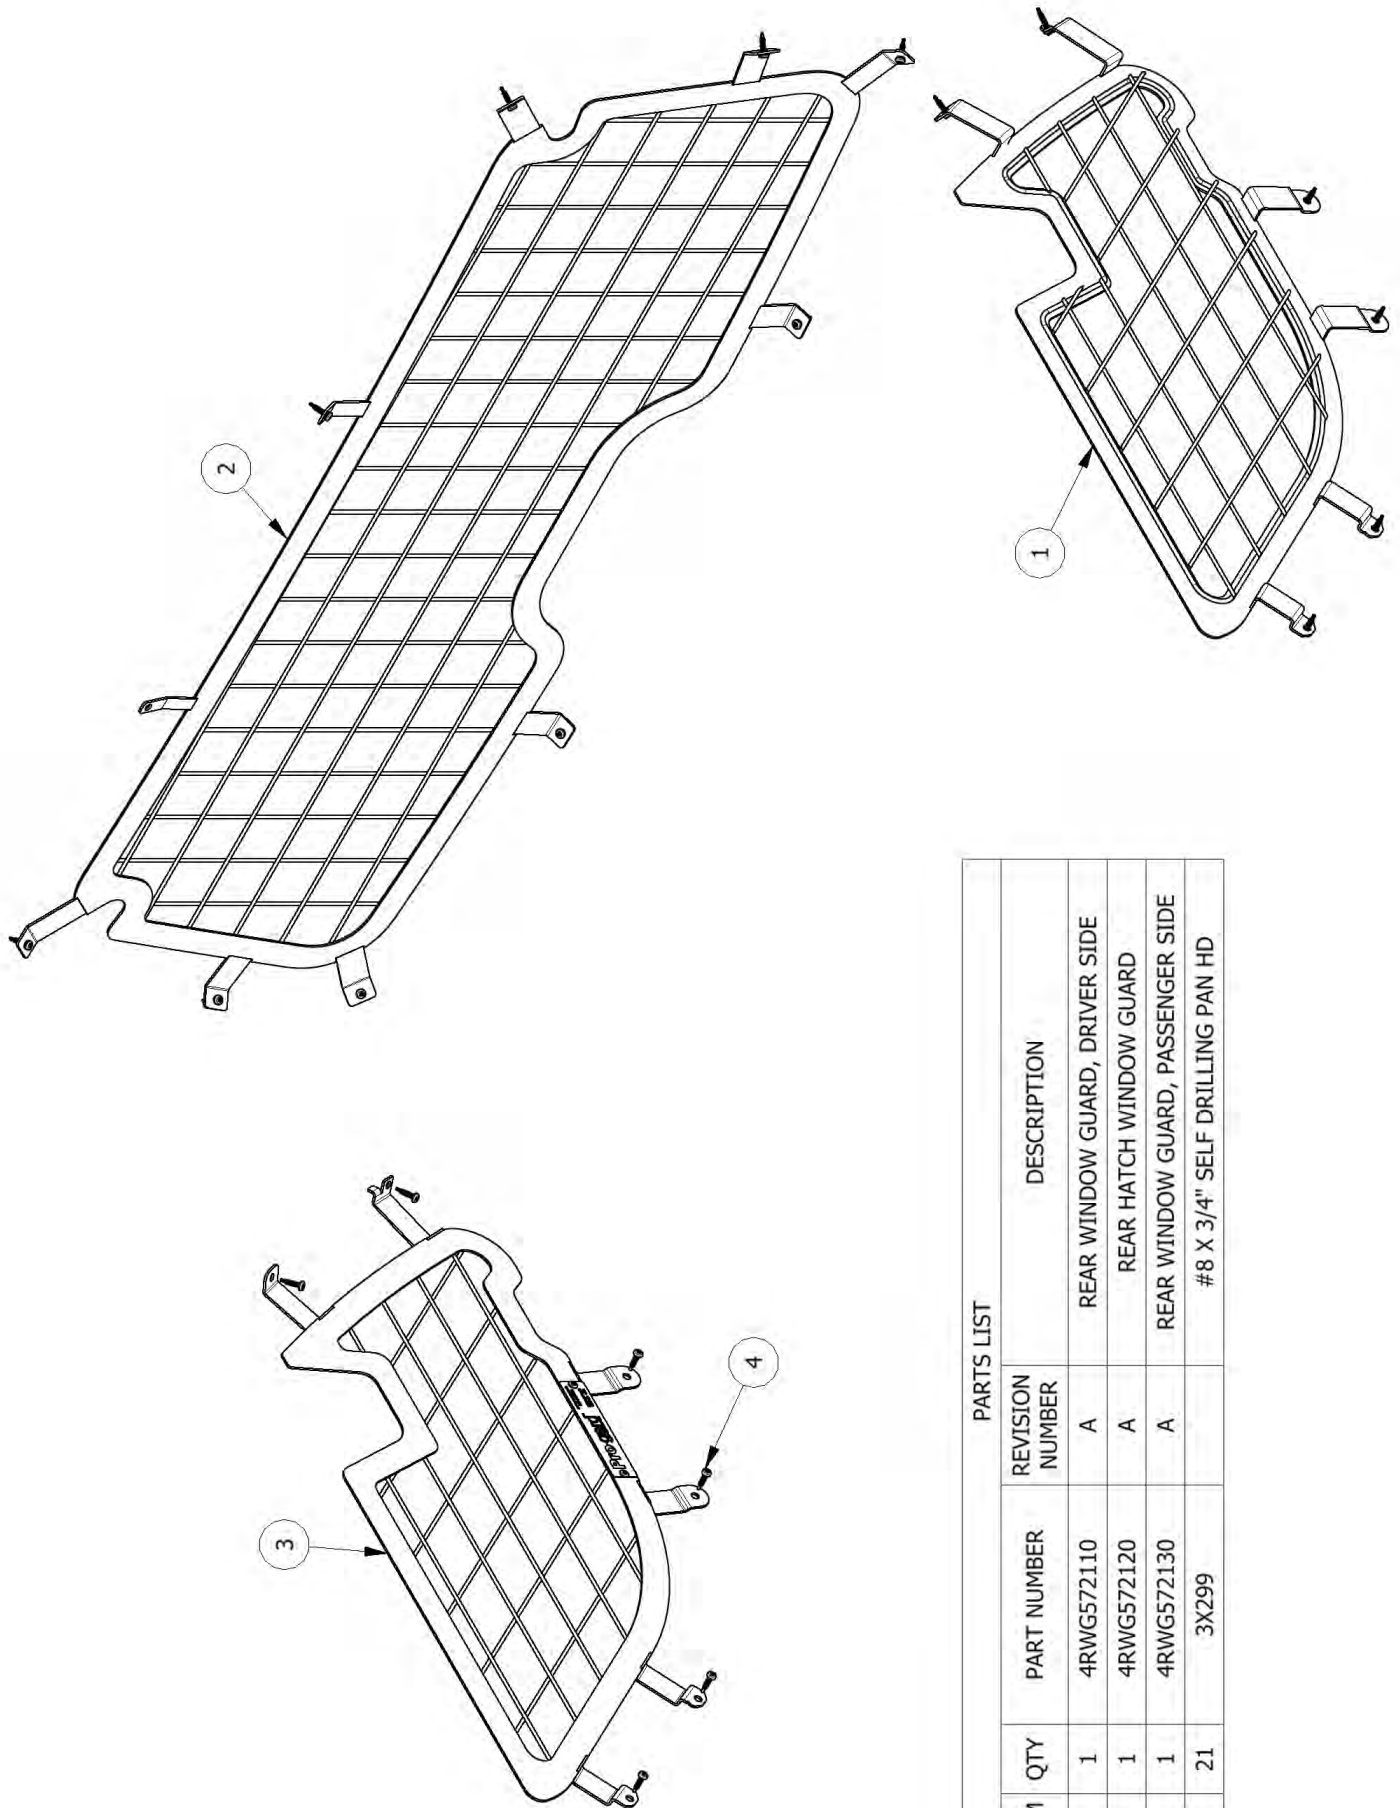

PARTS LIST				
ITEM	QTY	PART NUMBER	REVISION NUMBER	DESCRIPTION
1	1	4RWG572110	A	REAR WINDOW GUARD, DRIVER SIDE
2	1	4RWG572120	A	REAR HATCH WINDOW GUARD
3	1	4RWG572130	A	REAR WINDOW GUARD, PASSENGER SIDE
4	21	3X299		#8 X 3/4" SELF DRILLING PAN HD