


INSTALLATION GUIDE

**2020 - CURRENT
FORD POLICE INTERCEPTOR UTILITY
POLYCARBONATE WINDOW ARMOR
WBP47NPUINT20**

Pro-gard[™]
PRODUCTS LLC.

STRONG. RELIABLE. SECURE.

**THESE COMPONENTS ARE REQUIRED
TO INSTALL THE PRO-GARD WBP47NPUINT20 WINDOW ARMOR**

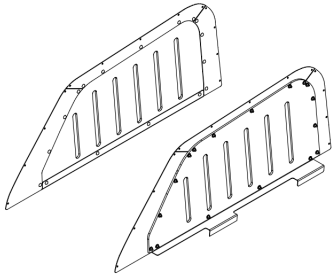

WINDOW ARMOR ASSEMBLIES



HARDWARE KIT

- I. Refer to the diagram above to verify all parts were received.
- II. Tools required:
 - A. Drill with #2 Philips driver
 - B. 7/64" diameter drill bit
- III. Read all instructions carefully before beginning the installation process.

NOTE: This window armor is only used with the OEM door panel.

IV. Window Armor Installation

- A. From the inside of the door, insert the window armor assembly flanges in the window glass track until bottom rests on top of the OEM Door Panel. (See Fig. 1).

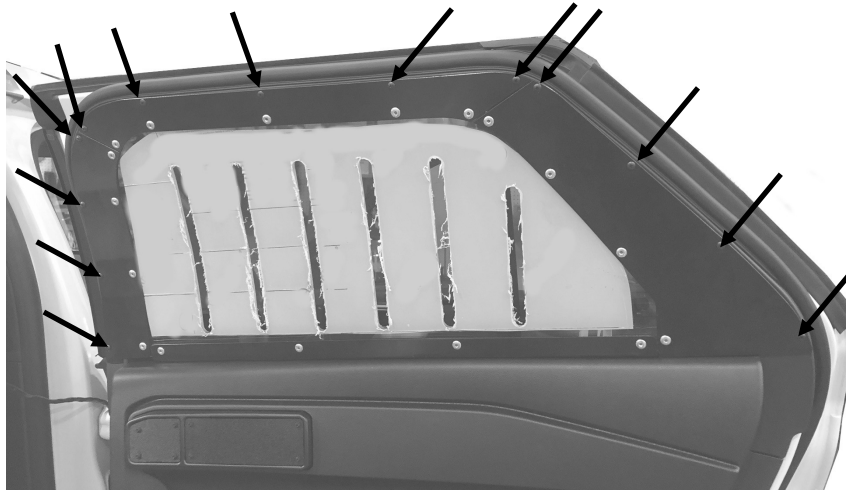


Fig. 1– PASSENGER SIDE SHOWN

- B. Center the metal mounting frame to the door trim. Ensure all holes line up with the door trim.
- C. Fasten using (13) [3X72] screws. The supplied screws are Type-A self-drilling but sometimes it is necessary to drill a 7/64" pilot hole. Apply pressure to the metal framework to hold tight against door trim while fastening. Clamps are recommended and/or have assistance while fastening.

Installation complete

If you have any problems with this installation or have any questions please call (800-480-6680) and ask for technical assistance.