



INSTALLATION GUIDE

**2021 - CURRENT
CHEVROLET TAHOE
STORAGE DRAWERS
ASBD57T21
WSD57T21**

Pro-gardTM
PRODUCTS LLC.

STRONG. RELIABLE. SECURE.

**THESE COMPONENTS ARE REQUIRED
TO INSTALL A STORAGE DRAWER**

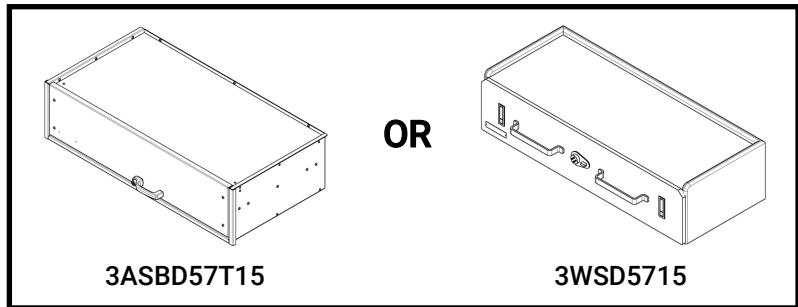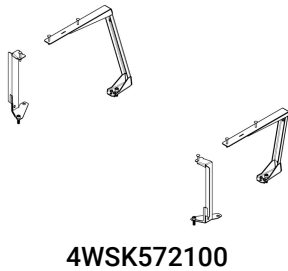

I. The following tools will be required to complete the installation

- | | | |
|----------------------------|------------------|-------------------|
| A. 7/16" Socket | D. 3/16" Hex Key | G. Utility Knife |
| B. 1/2" Socket | E. 8mm Hex Key | H. 9/32 Drill Bit |
| C. 1/2" Combination Wrench | F. 3/8" Socket | I. Torx T50 |

II. Read all instructions and refer to the Parts List to ensure all parts were received.

NOTE: This storage drawer can be used with or without the Pro-gard Cargo Barrier system. Install the Barrier system before installing the storage drawer.

WARNING: Locate all wiring, fuel lines, brake lines, coolant lines, and refrigerant lines before drilling any holes or installing any self-drilling fasteners.

III. Prepare the Cargo Area

- A. Locate the points where the storage drawer brackets will mount. Figure 1 shows the Barrier brackets that the storage drawer brackets will mount on top of if present - the floor covering is not shown in the figure. If the storage drawer is being installed without a Barrier, the same locations will be used but the storage drawer brackets will bolt directly to the floor pan.

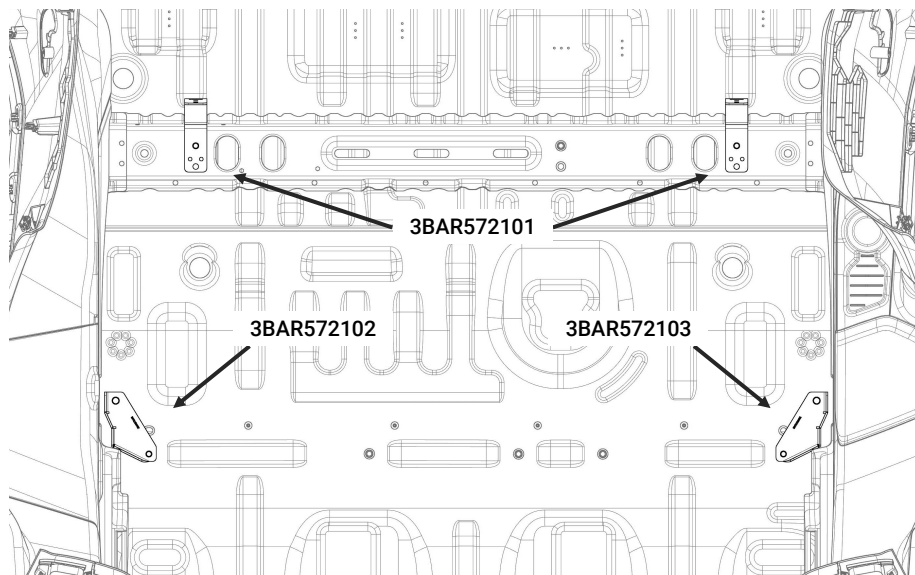


Figure 1

- B. Locate the (4) storage drawer brackets [3WSD572100, 01, 02, 03] and place them into the cargo area. Figure 2 shows the locations they will mount to.
- C. Using a utility knife, trim the floor covering to ensure the brackets will mount either directly on top of the barrier brackets or flush to the floor pan.

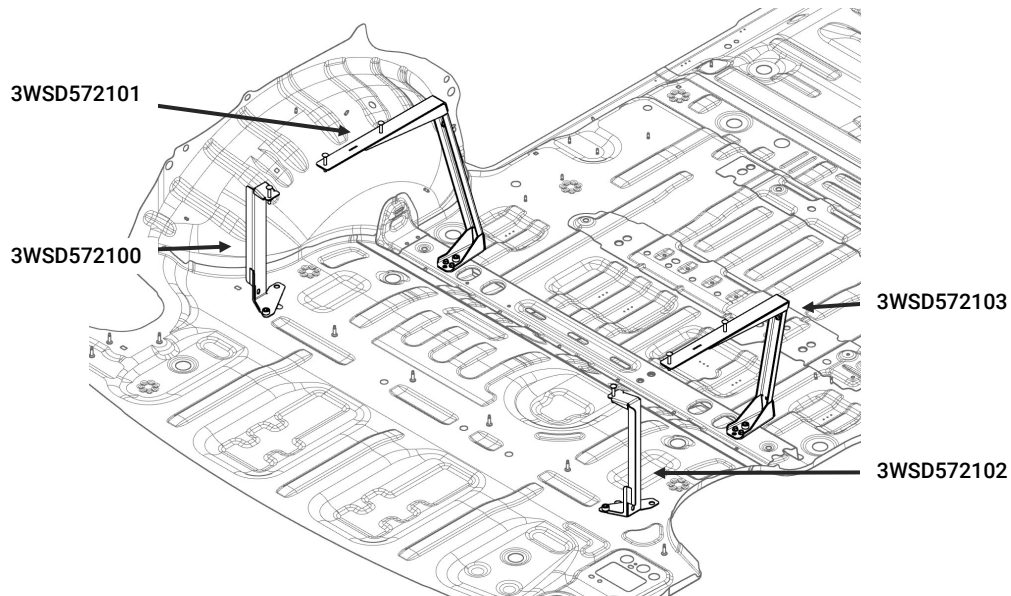


Figure 2

IV. Install the Rear Brackets

- A. Using a T50, remove the driver side OEM 3rd row seatbelt fastener - this fastener will be holding the Driver Lower Barrier Bracket [3BAR572102] if the Barrier is installed.
- B. Using an 8mm hex key, remove the M10 bolt [3X254] from the Barrier Bracket and then use a 3/16" hex key and a 1/2" wrench to remove the 5/16" fastener and whiz nut holding the Barrier Support Bar [3BAR572105] to the bracket.
- C. Position the Driver Rear Storage Drawer Bracket [3WSD572100] as shown in Figure 3. Loosely secure in place with the OEM fastener that was removed in step A. and a M10 bolt [3X254]. If installing with a Barrier, position the Barrier Support Bar between the Lower Barrier Bracket and the Rear Storage Drawer Bracket and loosely secure with the fastener and nut that were removed in step B (Fig. 3).
- D. Use a T55 and an 8mm hex key to tighten the fasteners attaching the bracket to the vehicle. If installing with a Barrier, use a 3/16" hex key and a 1/2" wrench to tighten the 5/16" fastener.

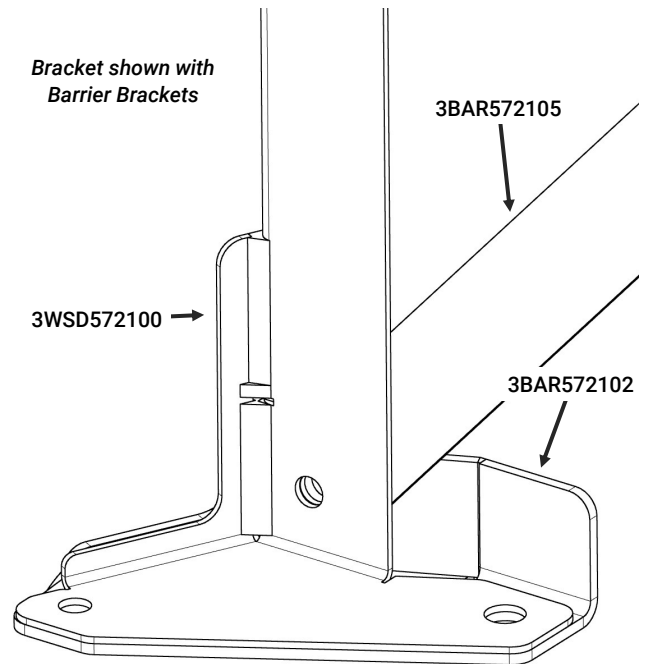


Figure 3

- E. Repeat steps A. - D. for the passenger side using the Passenger Rear Storage Drawer Bracket [3WSD572102] and another (1) M10 socket cap screw [3X254].

V. Install the Front Brackets

- A. Locate the Driver Front Storage Drawer Bracket [3WSD572101] and orient it according to the position identified in section III. If installing with a Barrier, this is on top of the driver side Lower Barrier Bracket [3BAR572101] (Fig. 4).
- B. If installing with a Barrier, use a 3/8" socket to remove the two self-drilling fasteners [3X162] and use an 8mm hex key to remove the M10 bolt [3X254] from the Lower Barrier Bracket. Then use a 7/16" socket to remove the (2) 1/4" whiz nuts [3X16Z] that are holding the Lower Barrier Bracket to the Barrier.
- C. Place the Driver Front Storage Drawer Bracket into position and loosely secure with (1) M10 bolt [3X254]. If installing with a Barrier, loosely secure with the M10 bolt as well as the (2) 1/4" whiz nuts that were removed in the previous step - the 1/4" bolts will go through the Barrier, the Lower Barrier Bracket, and the Storage Drawer Bracket.
- D. Repeat steps A. - C. for the passenger side using the Passenger Front Storage Drawer Bracket [3WSD572103] and (1) M10 bolt [3X254] if necessary.

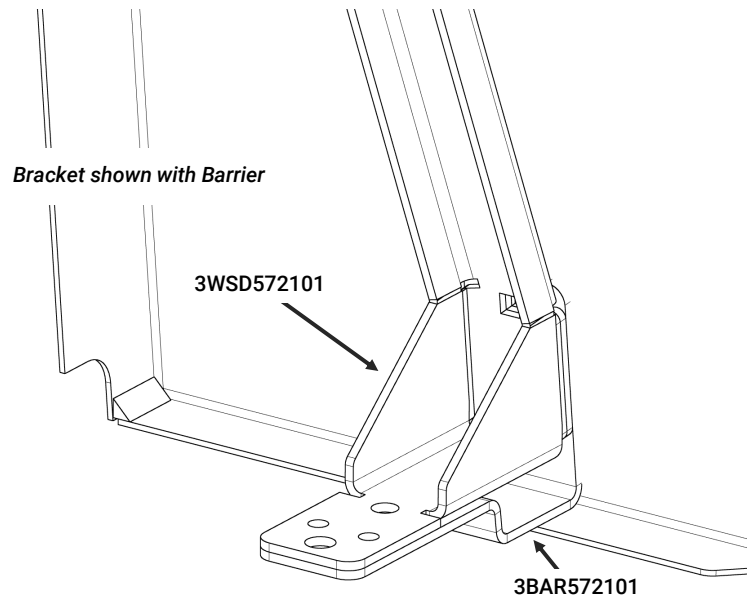


Figure 4

VI. Drawer Installation

- A. Open the drawer that is being installed and release the drawer from the housing by pushing on the black tabs inside the drawer slides and sliding the drawer out. Set the drawer aside.
- B. If installing an Aluminum Drawer:
 1. Locate (6) carriage bolts [3X001] and (6) whiz nuts [3X16Z] and place them in the cargo area of the vehicle.
 2. Position the drawer housing on top of the brackets, align the holes in the drawer housing with the corresponding holes in the brackets and place a carriage bolt through each of them.
 3. Install a whiz nut onto each of the bolts to secure the drawer to the brackets.
 4. Orient the drawer housing in the desired location within the vehicle then tighten the M10 bolts that were left loose on the Front Brackets. Install (2) self drilling screws [3X162] into each of the Front Brackets using the small holes in the brackets. If installing with a Barrier, these self-drilling screws will be using holes that were originally made when the Barrier was installed.
 5. If installing with a Barrier, use the hole in the top portion of the Front Brackets as a guide to drill a hole in the Barrier. Place (1) washer [3X12] between each Front Bracket and the Barrier and secure the Front Brackets to the Barrier using (1) 1/4" button head [3X184] and (1) whiz nut [3X612] per side.
- C. If installing a Wood Drawer:
 1. Orient the Front Brackets to line up with the Rear Brackets as best as possible. Tighten the M10 bolts that were left loose on the Front Brackets. Install (2) self drilling screws [3X162] into each of the Front Brackets using the small holes in the brackets. If installing with a Barrier, these self-drilling screws will be using holes that were originally made when the Barrier was installed.

2. If installing with a Barrier, use the hole in the top portion of the Front Brackets as a guide to drill a hole in the Barrier. Place (1) washer [3X12] between each Front Bracket and the Barrier and secure the Front Brackets to the Barrier using (1) 1/4" button head [3X184] and (1) whiz nut [3X612] per side.
 3. Locate (6) carriage bolts [3X001] and (6) whiz nuts [3X16Z] and place them in the cargo area of the vehicle.
 4. Position the drawer housing on top of the brackets and mark the (6) locations where the holes in the brackets meet the bottom of the drawer.
 5. Remove the drawer housing from the vehicle and use a 9/32" drill bit to drill the holes marked in the previous step.
 6. Position the drawer housing back in the vehicle and install a carriage bolt and whiz nut into each of the (6) holes to secure the drawer housing to the brackets.
- D. Reinstall the drawer by carefully sliding the drawer slides back together.

Installation complete

If you have any problems with this installation or have any questions please call (800-480-6680) and ask for technical assistance.

PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	3WSD572100	DRIVER REAR STORAGE DRAWER WELDMENT
2	1	3WSD572101	DRIVER FRONT STORAGE DRAWER WELDMENT
3	1	3WSD572103	PASSENGER FRONT STORAGE DRAWER WELDMENT
4	1	3WSD572102	PASSENGER REAR STORAGE DRAWER WELDMENT
5	1	4WSK572101	STORAGE DRAWER HARDWARE KIT
5.1	6	3X16Z	1/4-20 LARGE HEX WHIZ NUT-ZINC
5.2	6	3X001	1/4-20 X 1 3/4 CARRIAGE BOLT
5.3	4	3X254	M10-1.5X30 SHCS ZINC
5.4	4	3X162	#14 x 3/4" SELF DRILLING HEX HEAD SCREW
5.5	2	3X12	1/4 FLAT WASHER, BLACK
5.6	2	3X184	1/4-20X0.75, BHSCS, BLACK OXIDE
5.7	2	3X612	1/4-20 LARGE DIAMETER SERRATED FLANGE NUT

