



INSTALLATION GUIDE

*2021 - CURRENT
FORD F-150
UNDER SEAT STORAGE
USS81FT21*

Pro-gardTM
PRODUCTS LLC.

STRONG. RELIABLE. SECURE.

**THESE COMPONENTS ARE REQUIRED
TO INSTALL THE CARGO STORAGE FLOOR**

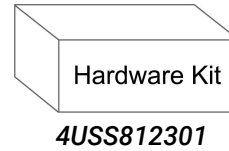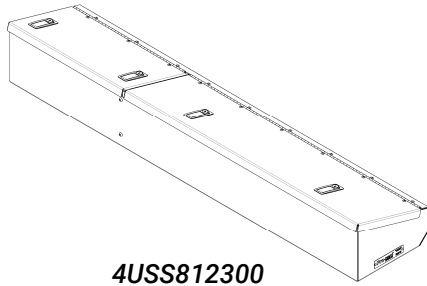

I. The following tools will be required to complete the installation

- A. 1/2" deep well socket
- B. 1/2" box end wrench
- C. Ratchet wrench

II. Read all instructions and refer to the Parts List to ensure all parts were received.

WARNING: Locate all wiring, fuel lines, brake lines, coolant lines, and refrigerant lines before drilling any holes or installing any self-drilling fasteners.

III. Vehicle Preparation

A. Lift up rear seats

- 1. Fold rear seats up.
- 2. Place under seat storage box into vehicle.

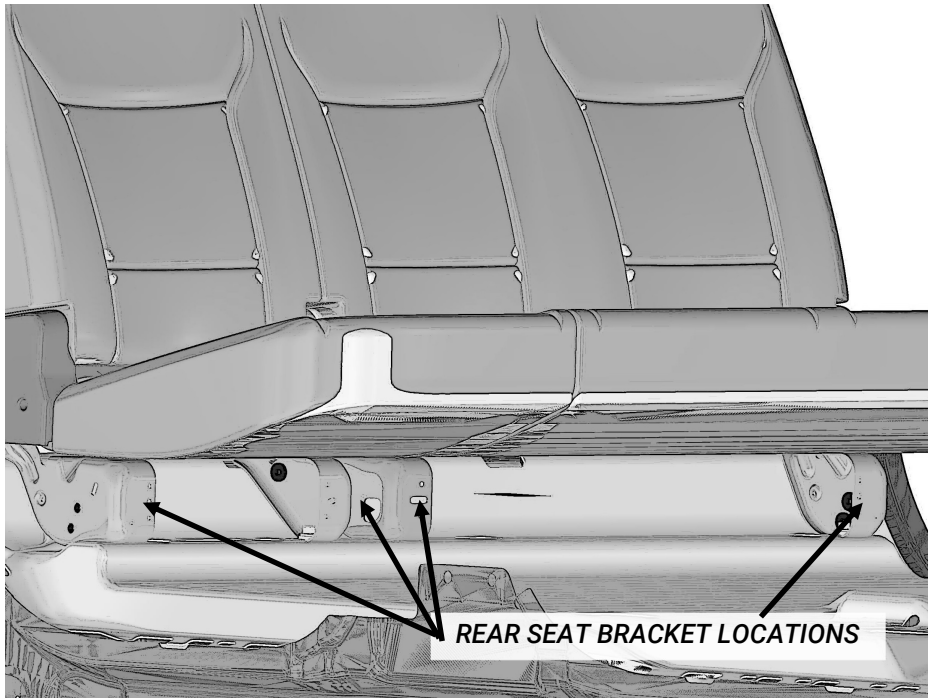


Figure 1

IV. Mount Box to Seats

A. Align box with rear seat brackets

1. Center box within the truck and align holes with rear seat bracket holes / slots. (Figure 1)
2. Insert (4) 5/16-18 x 3/4" bolts [3X172] thru box holes.
3. Behind the seat bracket, start 5/16-18 serrated nut [3X619] . Tighten using 1/2" wrench. Do this in all (4) locations.
4. **OPTIONAL** If vehicle has the **power inverter option**: Insert (4) 5/16-18 x 2" bolts [3X172] thru box holes.
5. Between box and seat brackets, place standoff [3USS812310] and then start 5/16-18 serrated nut [3X619] behind the seat bracket. Tighten using 1/2" wrench. Do this in all (4) locations.(Figure 2)

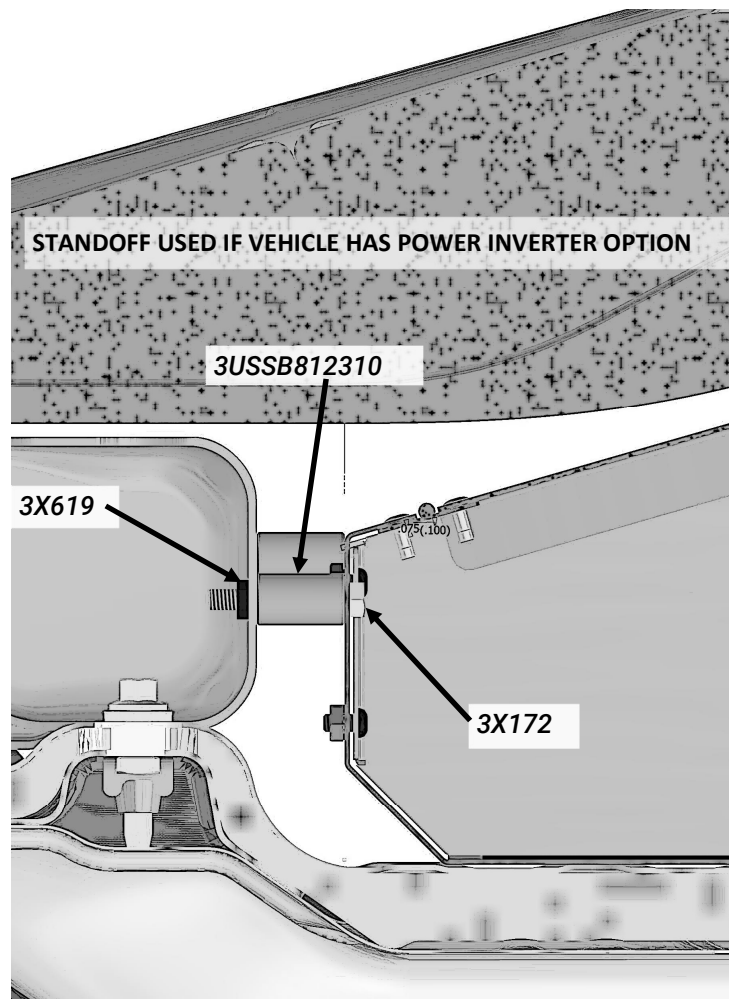


Figure 2

Installation complete

If you have any problems with this installation or have any questions please call (800-480-6680) and ask for technical assistance.

PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	3USS812314	RUBBER MAT SMALL
2	1	3USS812315	RUBBER MAT LARGE
3	1	4USS812301	UNDER SEAT STORAGE KIT
3.1	4	3USS812310	STANDOFF
3.2	4	3X172	5/16-18 x 2" HHMS, Zn
3.3	4	3X619	5/16-18 SERRATED FLANGE NUT, BLACK ZINC

