INSTALLATION GUIDE

2018+ Durango
Cargo Storage Lid
CSL67D18

Pro-gard™
PRODUCTS LLC.

STRONG. RELIABLE. SECURE.

Released 09.5.2024

pro-gard.com
800.480.6680

THESE COMPONENTS ARE REQUIRED TO INSTALL CARGO LID

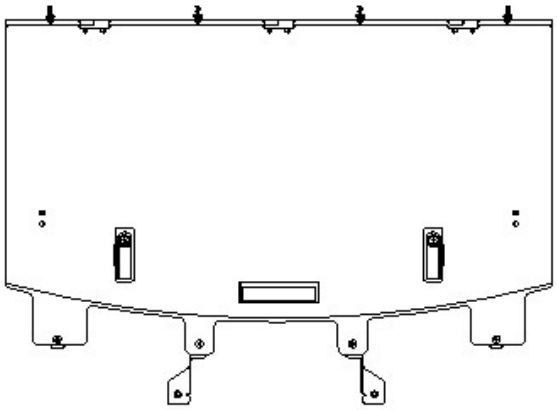

CSL67D18

I. The following tools will be required to complete the installation

A. Phillips Screwdriver
B. 5/32" Allen Wrench
C. 3/8" socket
D. 10mm socket
E. 7/16" Socket
F. Trim removal tools

II. Read all instructions and refer to last page to ensure all parts were received.

WARNING: *Locate All wiring, fuel lines, brake lines, coolant lines, or refrigerant lines before drilling any holes or installing any self-drilling fasteners.*

NOTE: Before Cargo Lid installation you should have installed Cargo Storage Floor CSF67D18.

III. Vehicle Prep

A. Remove the assembly from the packaging and separate the lid from the halo by sliding the hinges apart. Place the lid aside for installation in later steps.

B. Remove the factory cargo lid and rear trim. Retain the trim for final installation steps. (Figure 1)

Fig 1

IV. Halo Installation

A. Install the halo into the cargo area with the support tabs facing down. (Figure 2) Line up the four holes at

the front of the halo with the four holes in the Cargo Storage floor and install four 1/4-20 button head screws [3x283] and four 1/4-20 hex nuts [3x16SZ]. Leave the fasteners finger tight at this time.

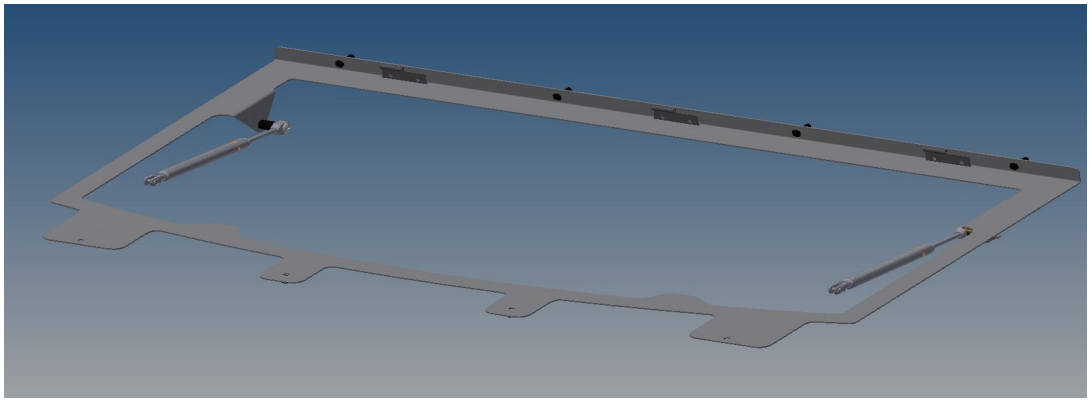

Fig 2

B. Bolt the left Cargo Lid Center Bracket [3CSL671820] and the right Cargo Lid Center Bracket [3CSL671821] to the halo as shown using two 1/4-20 Phillips head screws [3X03] and two 1/4-20 hex nuts [3X16]. (Figure 3)

C. Remove the two factory 10mm nuts located at the outboard positions of the halo. Fasten the two Cargo Lid Outside bracket [3CSL671818] to the halo using two 1/4-20 Phillips head screws [3X03] and two 1/4-20 hex nuts [3X16]. Place the tighter bend against the halo. (Figure 4)

D. Replace the two nuts removed in the previous step. Drive in two self-tapping screws [3X110] into the vehicle body fastening the Center brackets.

E. Tighten all fasteners previously installed.

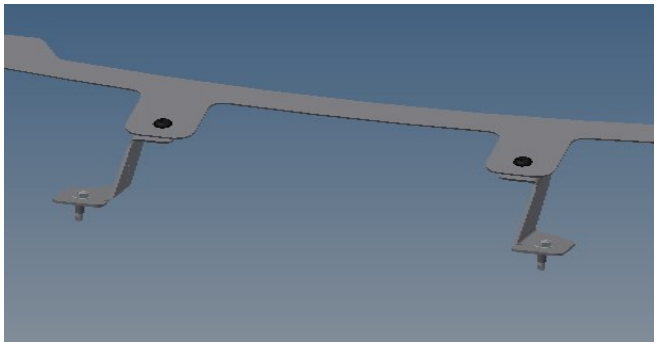

Fig 3

IV. Final assembly

A. Slide the hinges on the lid and Halo together.

B. Attach the hydraulic struts [3CSF000003] to the lid.

C. Close the lid and actuate the latches. Adjust the threaded stop on the latches to provide the right amount of clearance and a rattle free retention of the lid.

D. Replace the factory trim covering.

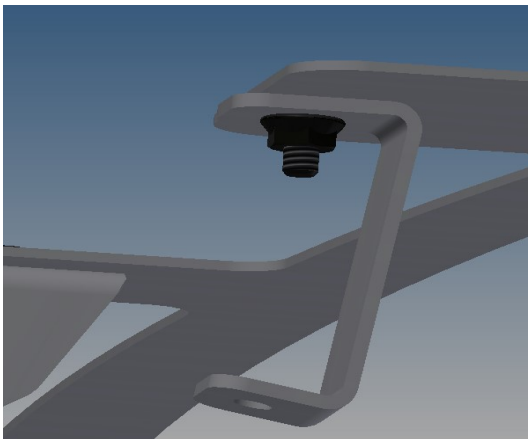

Fig 4

IV. Mounting Plate Installation

A. Locate passenger mounting plate [3PAR812100] aligning the (3) plate holes the (3) standoffs protruding through the B-pillar trim and loosely fasten with (3) 5/16-18x3/4" button head screws [3X149] (Figure 3).

Installation complete

If you have any problems with this installation or have any questions please call (800-480-6680) and ask for technical assistance.
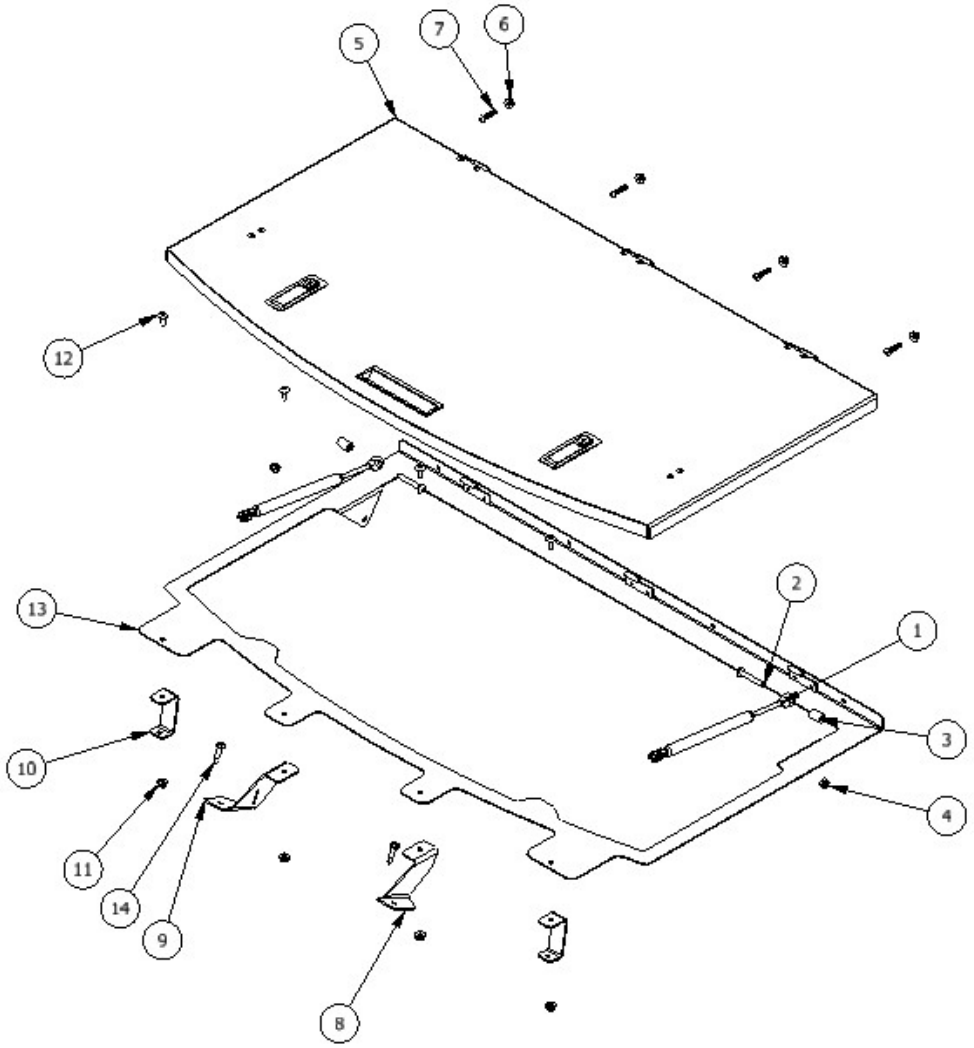
PARTS LIST				
ITEM	QTY	PART NUMBER	REVISION NUMBER	DESCRIPTION
1	2	3CSF000003	A	6-15-120 GAS STRUT, 130N FORCE
2	2	3X09		1/4-20 X 1-3/4 PHIL TRUSS HD BLK
3	2	3X644	ANY	1/2"x1/4" SPACER, 3/4" LONG, BLACK
4	2	3X17		1/4-20, HEX NUT, NYLON INSERT LOCK NUT, ZINC
5	1	4CSL671817	A	LID ASSEMBLY
6	4	3X16SZ		1/4-20 SMALL WHIZ NUT-ZINC
7	4	3x283		1/4-20X1 BHSCS BO SS
8	1	3CSL671821	A	COVER LID CENTER BRACKET R
9	1	3CSL671820	A	CARGO LID CENTER BRACKET L
10	2	3CSL671818	A	COVER LID OUTSIDE BRACKET
11	4	3X16		1/4-20 HEX WHIZ NUT - BLACK
12	4	3X03		1/4-20 X 5/8 PHIL TRUSS HD MS
13	1	3CSL671822	A	HALO WELDMENT
14	2	3X110		1/4"-14x1" SELF DRILLING SCREW