INSTALLATION GUIDE

2020+ UTILITY INTERCEPTOR
HD HEADLIGHT WRAPS
4PBHW47UINT25

Pro-gard™
PRODUCTS LLC.

STRONG. RELIABLE. SECURE.

Released 11.24.2025

pro-gard.com
800.480.6680

THESE COMPONENTS ARE REQUIRED
TO INSTALL THE HD HEADLIGHT WRAPS

3PBHW472001

3PBHW472000

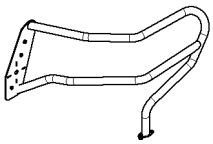

I. The following tools will be required to complete the installation

A. 9/16 Socket

B. 9/16 End Wrench

II. Read all instructions and refer to last page to ensure all parts were received

---

WARNING: *Locate all wiring, fuel lines, brake lines, coolant lines, or refrigerant lines before drilling any holes or installing any self-drilling fasteners.*

III. Prepare Vehicle

A. HD Push Bumper **PB47UINT20HD** and HD Fender Wraps **4PBFW47UINT25** should be installed on the vehicle.

B. Remove 3/8-16 bolt and nut retaining the fender wrap end trim. The end trim can be left in place.

C. Remove the wire covers on the push bumper.

IV. Install HD Headlight Wraps

A. Place the drivers headlight wrap [3PBHW472000] on the fender wrap and push the flat flange up against the side of the push bumper.

B. Place three 3/8-16 cap screws [3X603] through the headlight wrap [3PBHW472000] and the push bumper.

C. Thread three 3/8-16 flange hex nuts [3X601] onto the three 3/8-16 cap screws. Leave these loose as these will be tightened in a later step.

D. Place one 3/8-16 cap screw through the headlight wrap small flange and the fender wrap in the position nearest the push bumper. Install a 3/8-16 nut on the cap screw.

E. Replace the 3/8-16 bolt removed in step III B. Install the 3/8-16 nut back on the bolt.

F. Tighten the two bolts and nuts retaining the headlight wrap to the fender wrap.

G. Tighten the three bolts retaining the headlight wrap to the push bumper.

H. Replace the wire covers on the push bumper.

I. Repeat the steps on the passenger side using the passenger headlight wrap [3PBHW472001].

Installation complete

If you have any problems with this installation or have any questions please call (800-480-6680) and ask for technical assistance.

Pro-gard
PRODUCTS LLC
Pro-gard
Pro-gard
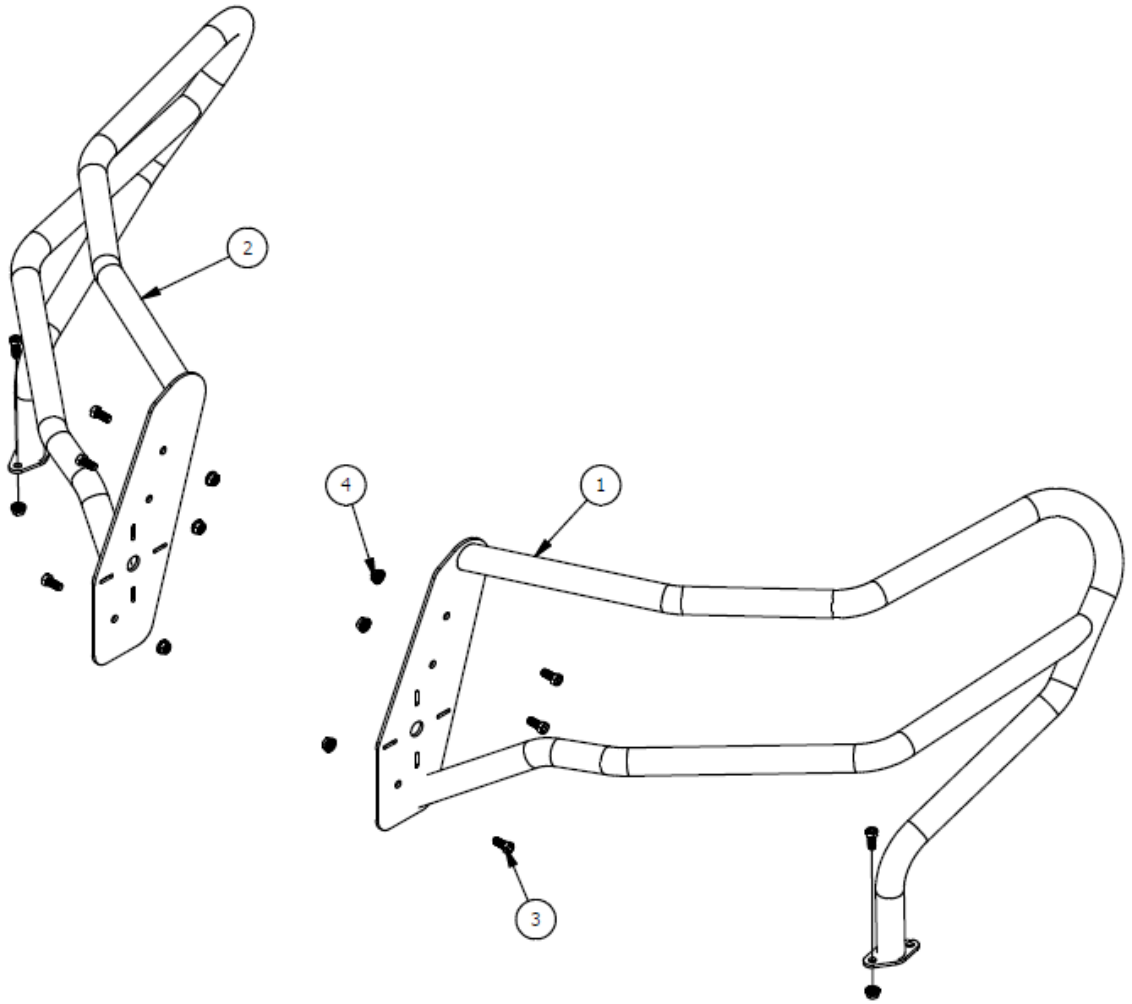
PARTS LIST				
ITEM	QTY	PART NUMBER	REVISION NUMBER	DESCRIPTION
1	1	3PBHW472000	B	DRIVER HEADLIGHT GUARD WELDMENT
2	1	3PBHW472001	B	PASSENGER HEADLIGHT GUARD WELDMENT
3	8	3X603	A	3/8-16 X 0.875" HEX HEAD BOLT, BLACK ZINC
4	8	3X601	A	3/8-16 SERRATED FLANGE HEX NUT, BLACK ZINC